



Performance Silicone Air Intake Tube

Part Number: 57-3001

2000-2003 Honda S2000 2.0L
2004-2005 Honda S2000 2.2L

Installation Instructions

For technical inquiries please email us at tech@hpsperformanceproducts.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle.
- If it is a fitment issue, please include pictures showing the fitment problem.
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page.
- Optional but recommended – Your contact phone number and preferred call back time.

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

Bill of Materials

Part Number: 57-3001

Description	Prep	Part Number	Qty	Check
Silicone Tube	1	57-3001	1	
T-Bolt Clamp	2	SSTC-76-84	1	
Worm Gear Clamp for air filter	2	EMSC-80-100	1	
Embossed Metal Clamp for breather tube	2	EMSC-12-22	1	

- Before installing any parts of this intake system, please read the instructions thoroughly.
- Verify the contents of this intake kit before disassembling your vehicle.
- **DO NOT INSTALL IF ANY PARTS ARE MISSING OR DAMAGED. CONTACT tech@hpsperformanceproducts.com IMMEDIATELY. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED DUE TO IMPROPER INSTALLATION.**
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the intake system while the engine is hot.
- This installation may require removal of coolant lines that may be hot.
- For technical inquiries, please e-mail us at tech@hpsperformanceproducts.com

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.

GETTING STARTED

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

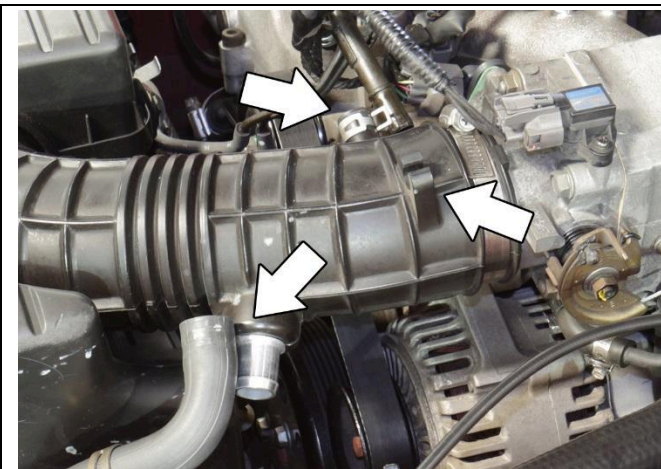


2. First unclip the electrical wires from the intake tube. Use pliers to clip release the spring clip to unplug the breather tube. Using the same method, disconnect the air pump hose on the other side of the intake tube.



3. Unbuckle the 6 spring loaded clips around the air box to remove the lid from the engine bay.



4. Lift up from the handle on the factory air filter to release it from the mounting grommet, then slide the filter off of the factory intake tube.

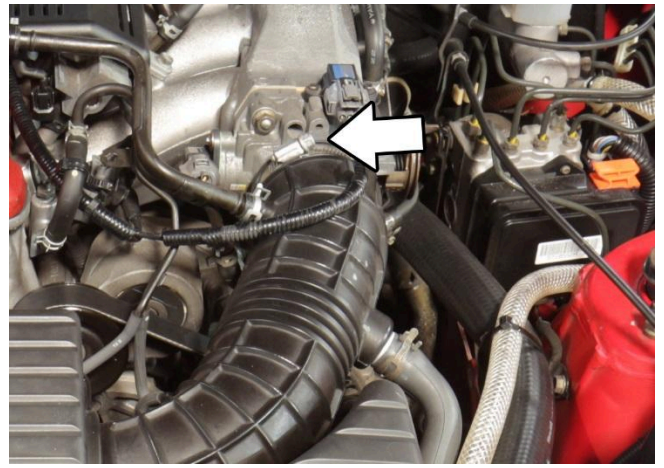

5. Loosen the hose clamp from the throttle body.



6. Carefully remove the factory intake tube from the vehicle.



7. Prepare the intake hose for installation by placing the clamps in their designated places.



8. Re-install the air filter onto the HPS intake tube with the clamp provided.



9. Reverse the earlier steps to install the intake tube and air filter onto the air box. Buckle the 6 clips on the air box.



10. Tighten the T-bolt clamp onto the throttle body. Insert the breather tube into the HPS intake tube and secure it with the clamp provided. Re-install the air pump hose using the factory clamp.




Final Steps

Once the intake has been positioned, tighten all of the clamps and secure all of the parts.

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that may be causing leaks or rattles and correct the problem.

Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.

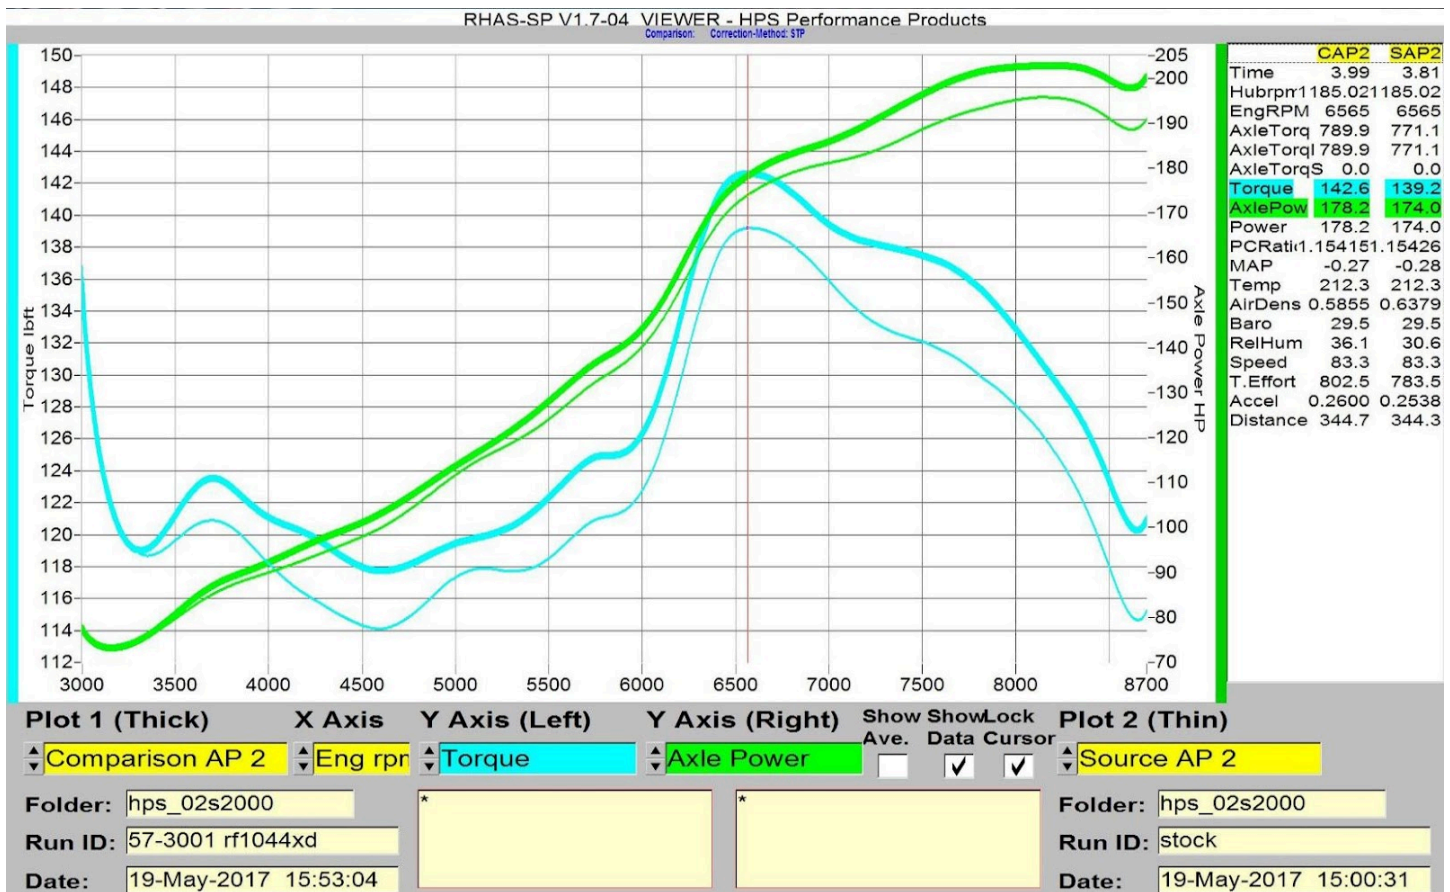

HPS Silicone Radiator Hose Kit (Black/Blue/Red) with Stainless Steel Clamps

**is now available for
2000-2003 Honda S2000 2.0L AND
2004-2005 Honda S2000 2.2L !**

Part Number: 57-1489 - MSRP: \$270



Contact our authorized dealers for the best pricing

or

Visit our website at www.hpsperformanceproducts.com for more details