



Performance Shortram Air Intake Kit

Part Number: 827-121

2002-2006 Acura RSX Type-S 2.0L
2002-2005 Honda Civic Si 2.0L

Installation Instructions

For technical inquiries please email us at tech@hpsperformanceproducts.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle.
- If it is a fitment issue, please include pictures showing the fitment problem.
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page.
- Optional but recommended – Your contact phone number and preferred call back time.

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

Bill of Materials

Kit Number: 827-121

Description	Prep	Part Number	Qty	Check
Intake Pipe	1	529-311	1	
2.75" HPS filter	2	HPS-4275	1	
Heat shield	3	HS-404	1	
Intake bracket	4	530-312	1	
2.75" Coupler x 2.5" Long	4	P3SC-275-L25	1	
T-Bolt Clamp for 2.75" Coupler	4	SSTC-73-81	2	
Clamp for Heatshield	4	EMSC-70-90	1	
6mm Bolt x 12mm long	4	HW-B6-12	2	
6mm Flat Washer x 16mm OD	4	HW-FW6L	2	
12mm Rubber Grommet	4	HW-RG12	1	
16mm Vacuum Hose x 2" Long (05-06 mode)	4	HTSVH159-BLK	1	

- Before installing any parts of this intake system, please read the instructions thoroughly.
- Verify the contents of this intake kit before disassembling your vehicle.
- DO NOT INSTALL IF ANY PARTS ARE MISSING OR DAMAGED. CONTACT tech@hpsperformanceproducts.com IMMEDIATELY. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED DUE TO IMPROPER INSTALLATION.
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the intake system while the engine is hot.
- This installation may require removal of coolant lines that may be hot.
- For technical inquiries, please e-mail us at tech@hpsperformanceproducts.com

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with **EXTREME** caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.


GETTING STARTED

1. Turn the ignition OFF. **Disconnect the vehicle's negative battery cable.** If the engine has run within the past two hours let it cool down.


NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicle's anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

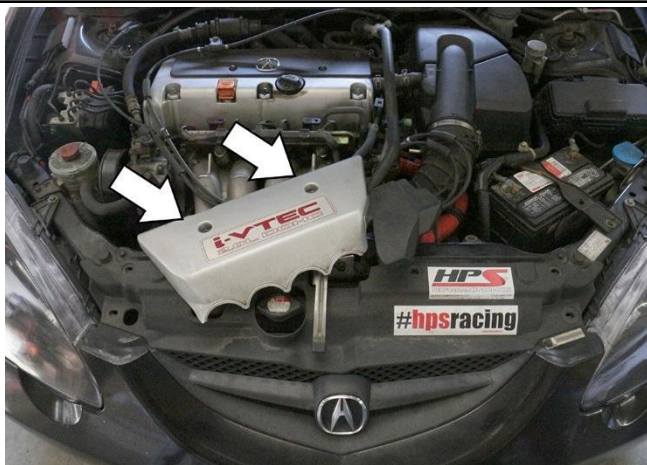


2. Remove the plastic cover on the intake manifold by unbolting the 2 bolts.

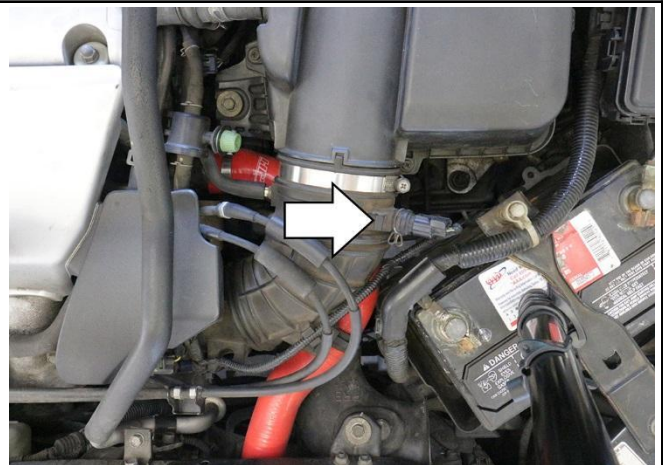

3. Remove the air temperature sensor from the air intake tube.

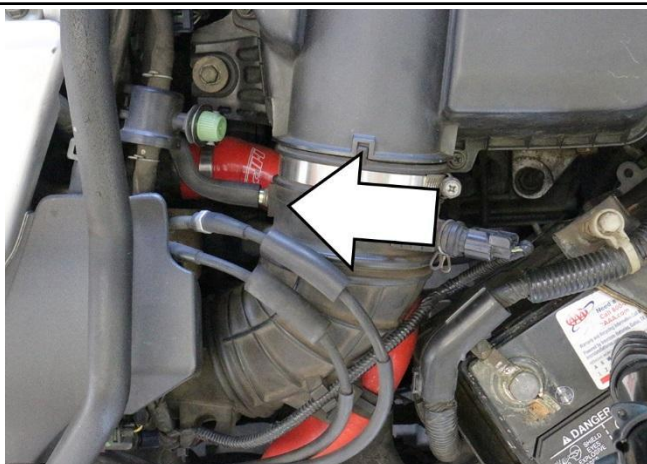


4. Disconnect the thermal valve vent hose from the stock intake tube.

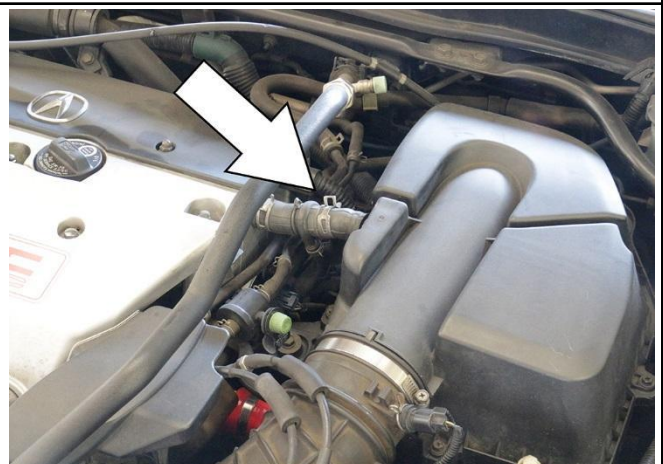


5. Slide the hose clamp back on the breather hose.



6. Loosen the hose clamps on the throttle body and air box, then remove the factory air intake tube from the engine bay.

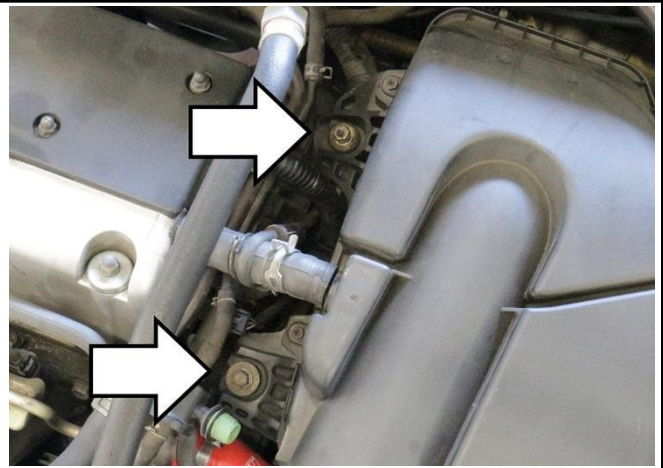


7. Remove the nut and bolt indicated attached to the air box with a 10mm socket.

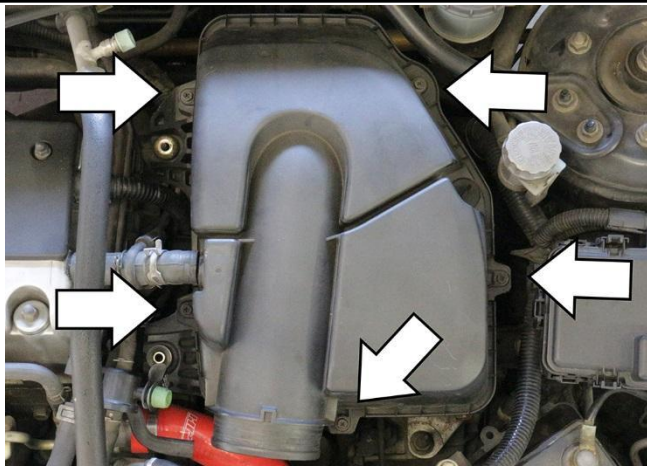

8. Unbolt the top half of the air box by loosening the 5 bolts as shown.



9. Remove the top half of the air box and disconnect the breather hose.

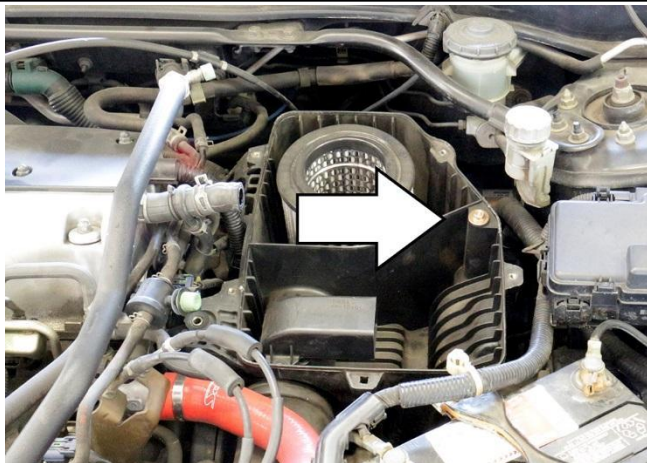

10. Remove the bolt on the lower air box assembly with a 10mm socket.



11. Remove the lower air box assembly from the engine bay.




12. Install the silicone coupler onto the throttle body using the T-bolt clamps included.




13. Install the intake bracket as shown using a M6 bolt and washer provided in the intake kit.



14. Install the air filter onto the HPS intake pipe as shown.

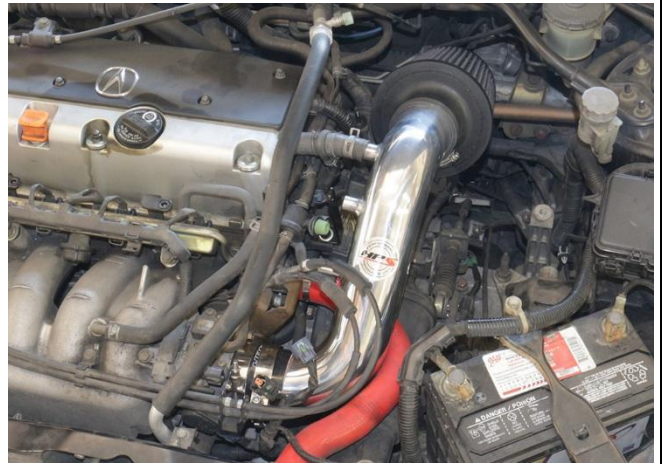

15. Insert the intake pipe into the silicone coupler on the throttle body.

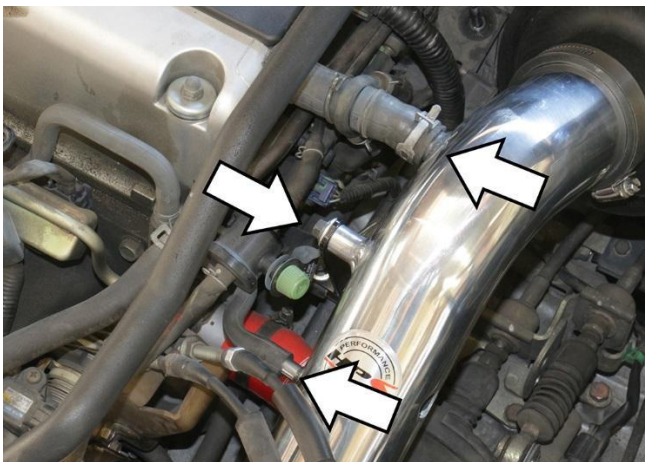

16. Install the breather hose and thermal vent hose onto the intake pipe. Secure the intake pipe using a M6 bolt and washer.



17. Install the rubber grommet and air temperature sensor as shown.


Final Steps

Once the intake has been positioned, tighten all of the clamps and secure all of the parts.

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that may be causing leaks or rattles and correct the problem.

Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.

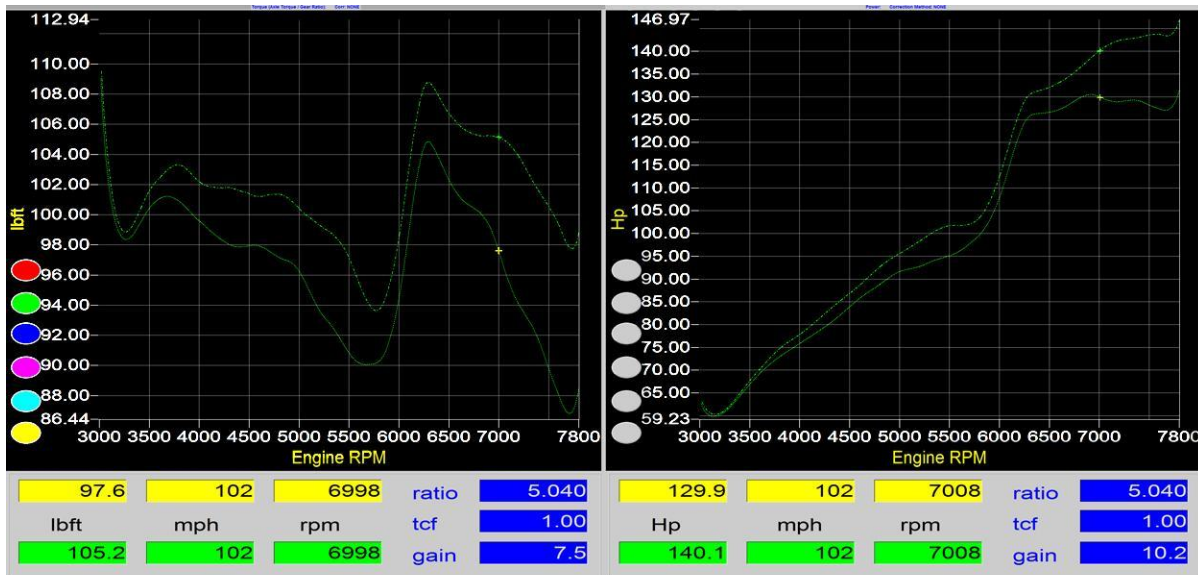

Folder hps_02rex-s
Run ID hot hps 275 srl
Date 11-Dec-2015 10:25:08

