



Silicone Shortram Air Intake Kit

Part Number: 827-610

2006-2009 Honda S2000 AP2 2.2L F22

***Drive-By-Wire model**

Installation Instructions

For technical inquiries please email us at tech@hpsperformanceproducts.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle.
- If it is a fitment issue, please include pictures showing the fitment problem.
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page.
- Optional but recommended – Your contact phone number and preferred call back time.

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

Bill of Materials

Part Number: 827-610

Description	Prep	Part Number	Qty	Check
Silicone Tube	# 1	57-3004	1	
HPS Filter	# 2	HPS-4304	1	
Clamp for Throttle Body	# 3	SSTC-76-84	1	
Clamp for Air Filter	# 3	EMSC-80-100	1	
Velocity Stack	# 3	HW-VS-350-600	1	

- Before installing any parts of this intake system, please read the instructions thoroughly.
- Verify the contents of this intake kit before disassembling your vehicle.
- DO NOT INSTALL IF ANY PARTS ARE MISSING OR DAMAGED. CONTACT tech@hpsperformanceproducts.com IMMEDIATELY. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED DUE TO IMPROPER INSTALLATION.
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the intake system while the engine is hot.
- This installation may require removal of coolant lines that may be hot.
- For technical inquiries, please e-mail us at tech@hpsperformanceproducts.com

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.


GETTING STARTED

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.


NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

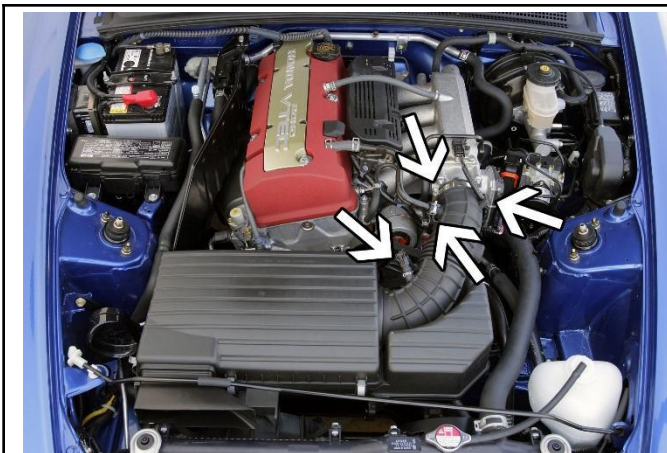

2. Remove the breather hose hardline, the intake air temperature sensor, and the wiring harness from the stock intake tube. Loosen the hose clamp on the throttle body.

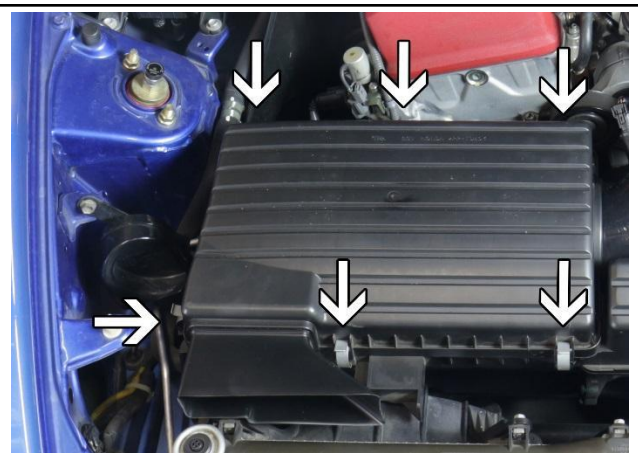

3. Release the six clips securing the top of the air box, then remove the stock intake tube from the vehicle.

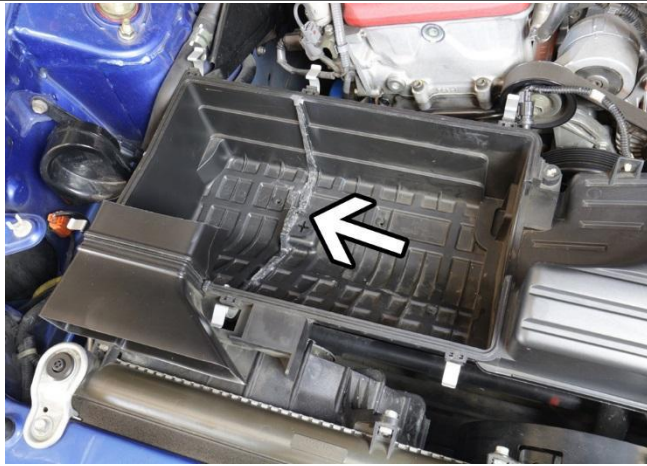

4. Modify the air box by removing the plastic divider from the air box.



5. Cut off the rivets and remove the air scoop from the top portion of the air box.



6. The final result of the air box should look like this.



7. Install the velocity stack onto the provided HPS filter and install it into the HPS intake tube.



8. Insert the HPS intake tube into the breather port hardline first then onto the throttle body. Insert the intake air temperature sensor. Tighten the hose clamp when everything is positioned correctly.



9. Re-install the air box lid back onto the air box assembly.

Final Steps

Once the intake has been positioned, tighten all of the clamps and secure all of the parts.

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that may be causing leaks or rattles and correct the problem.

Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.

HPS Silicone Radiator + Heater Hose Kit (Black/Blue/Red) with Stainless Steel Clamps is now available for 2006-2009 Honda S2000 2.2L !



Part Number: 57-1490 - MSRP: \$270.00

Contact our authorized dealers for the best pricing

or

Visit our website at www.hpsperformanceproducts.com for more details