



Performance Oil Catch Can Kit

Part Number: 860-015

Acura 2019-2025 RDX 2.0L Turbo

Installation Instructions

For technical inquiries please email us at tech@hpsperformance.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle
- If it is a fitment issue, please include pictures showing the fitment problem
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page
- Optional but recommended – Your contact phone number and preferred call back time

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

Bill of Materials

Kit Number: 860-015

Line #	Description	Part Number	Qty
1	Oil Catch Can	OCC-14	1
2	Oil Catch Can Bracket	OCC-BRKT-021	1
3	Straight Aluminum Adapter, AN-6 to 16mm x 1.50	AN816-6-M1615	2
4	Push-On Aluminum 90 degree Hose End, AN-06	150-9006	2
5	Bolt, M5 x 0.8, 12mm Long	HW-B5-10	3
6	150 Series Push-On Hose, AN-6	150-06	7.5 inches
7	150 Series Push-On Hose, AN-6	150-06	12.5 inches
8	Fuel Injection Clamp, 22mm -32mm	FIC-15	2

- Before installing any parts of this oil catch can kit, please read the instructions thoroughly.
- Verify the contents of this oil catch can kit before disassembling your vehicle.
- DO NOT INSTALL IF ANY PARTS ARE MISSING OR DAMAGED. CONTACT tech@hpsperformance.com IMMEDIATELY. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED DUE TO IMPROPER INSTALLATION.
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the catch can while the engine is hot.
- This installation may require removal of coolant lines that may be hot.
- For technical inquiries, please email us at tech@hpsperformance.com

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.


NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.

GETTING STARTED


1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicle's anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicle's anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

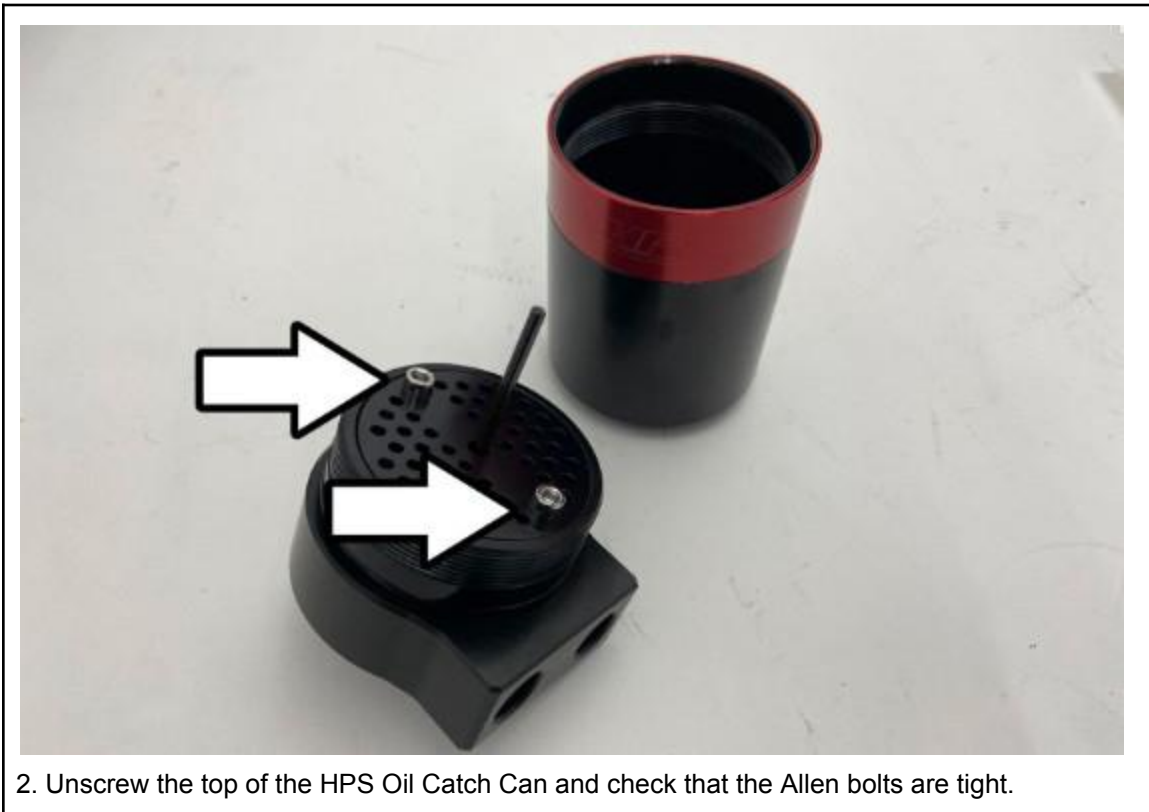


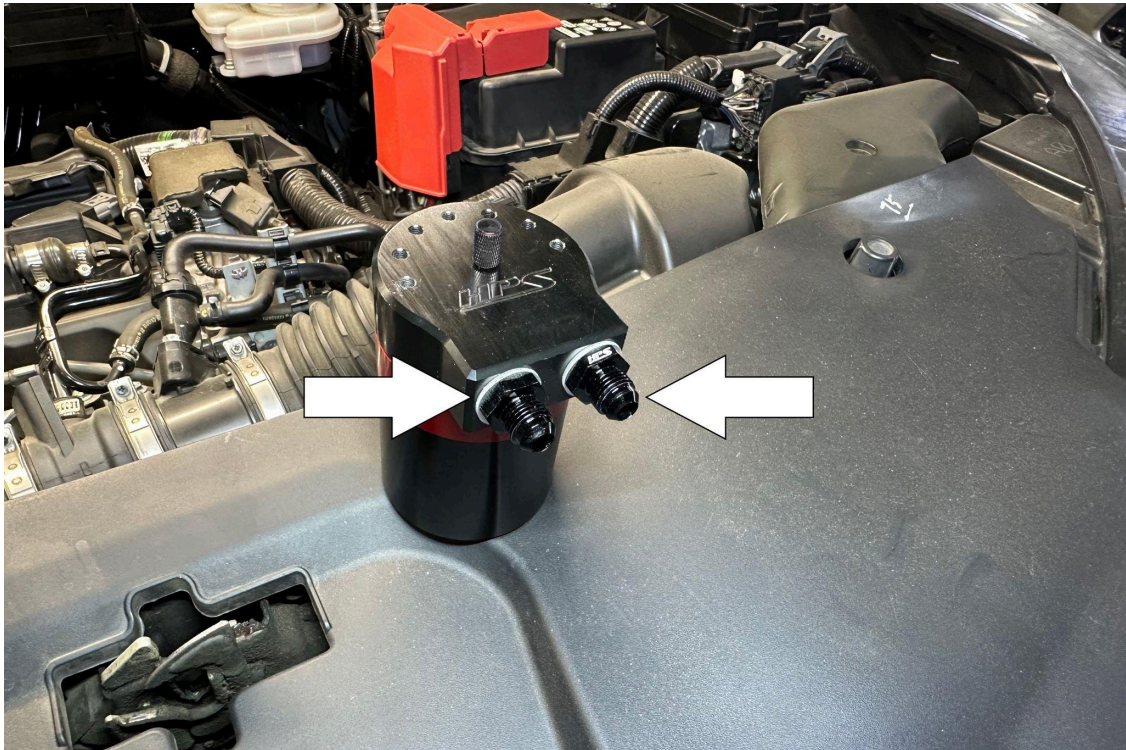


3. Install the two AN-6 to M16 x 1.5 adapter fittings and crush washers onto the oil catch.

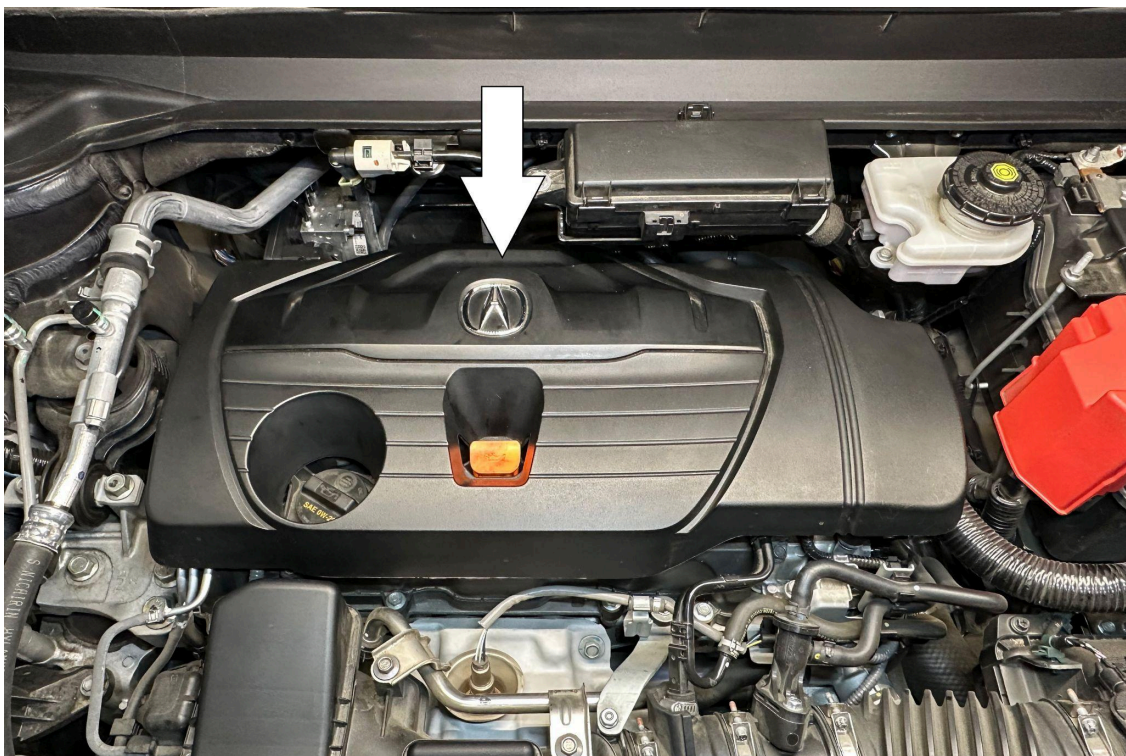


4. Remove the engine cover.

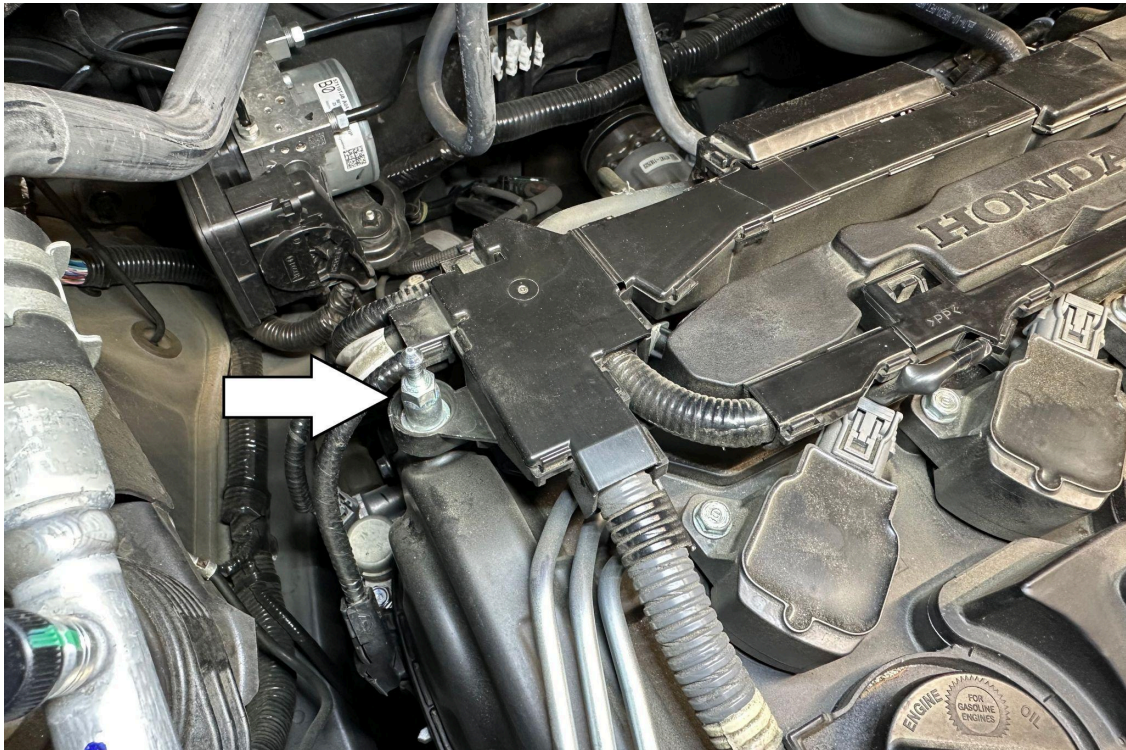


5. Remove the harness mount to gain access to the hose under the harness.

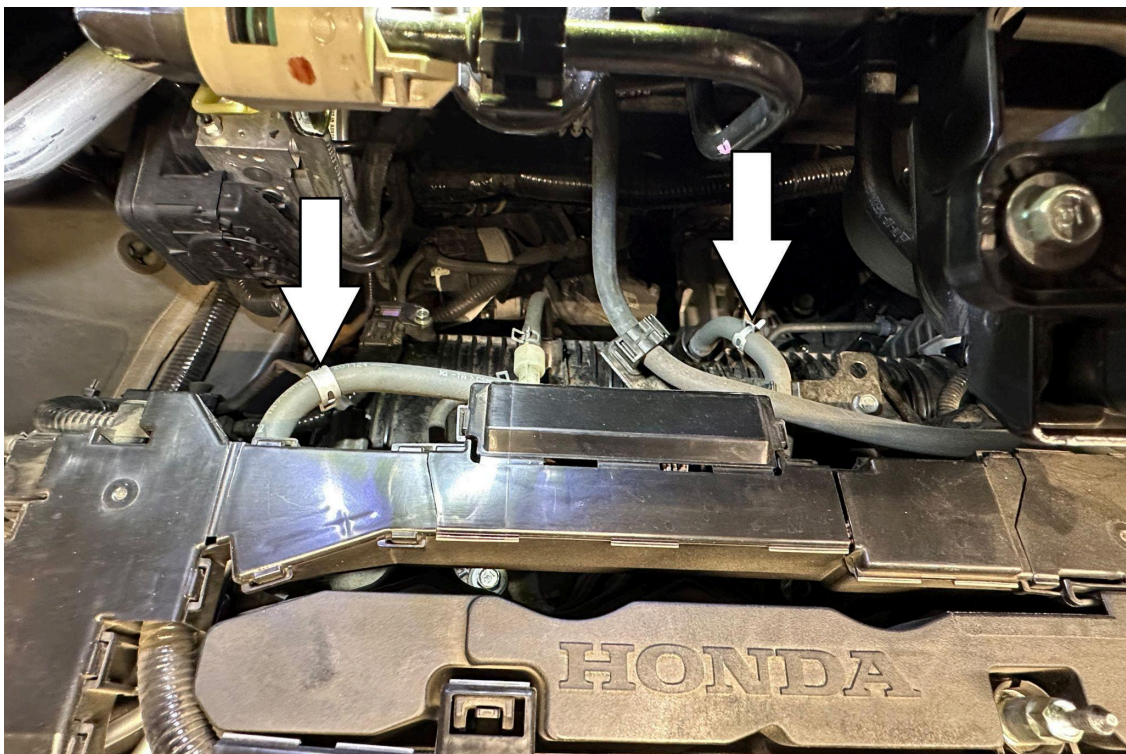

6. Remove the hose clamps securing the PCV hose that is routed from the valve cover to the intake manifold.

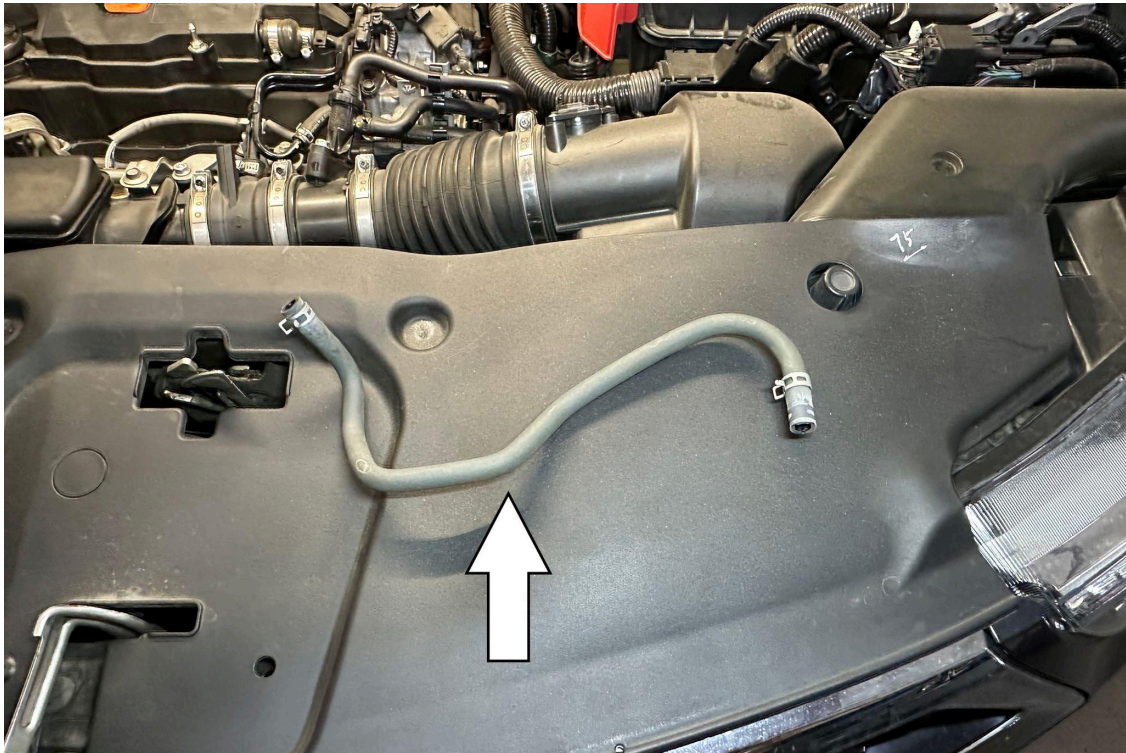


7. Remove the PCV hose from the engine bay.

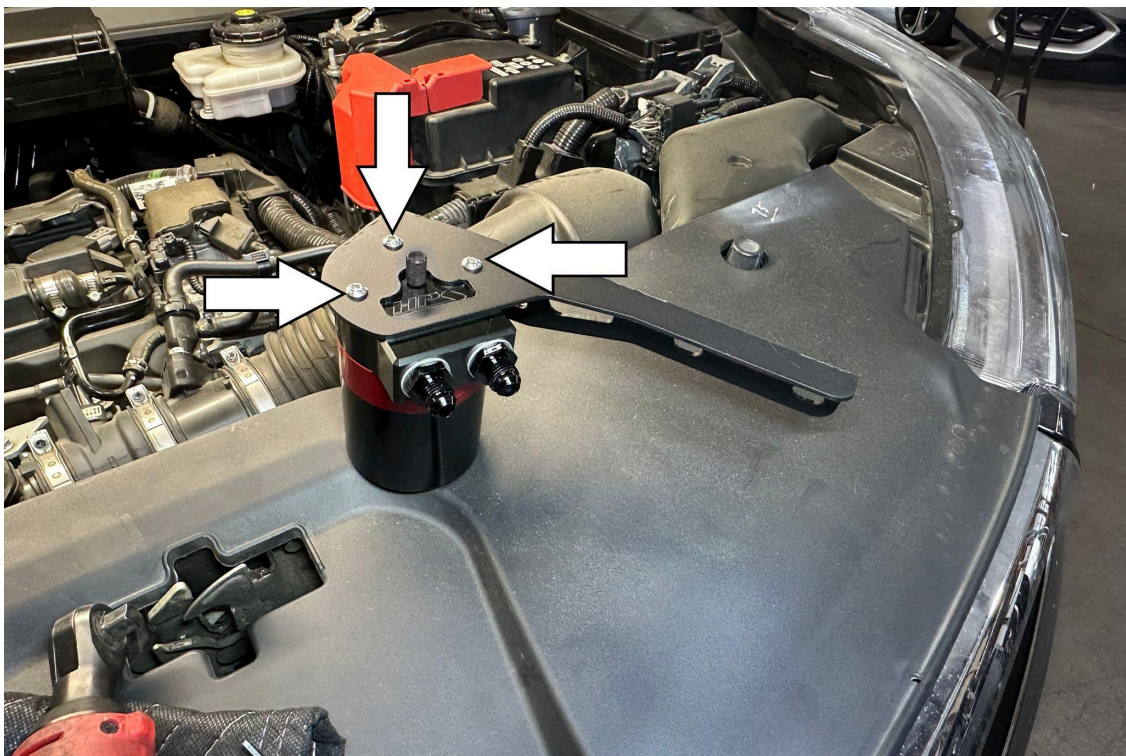


8. Secure the oil catch can to the catch can bracket using the three provided M5 bolts.



9. Uninstall the two bolts securing the fuel hose bracket.

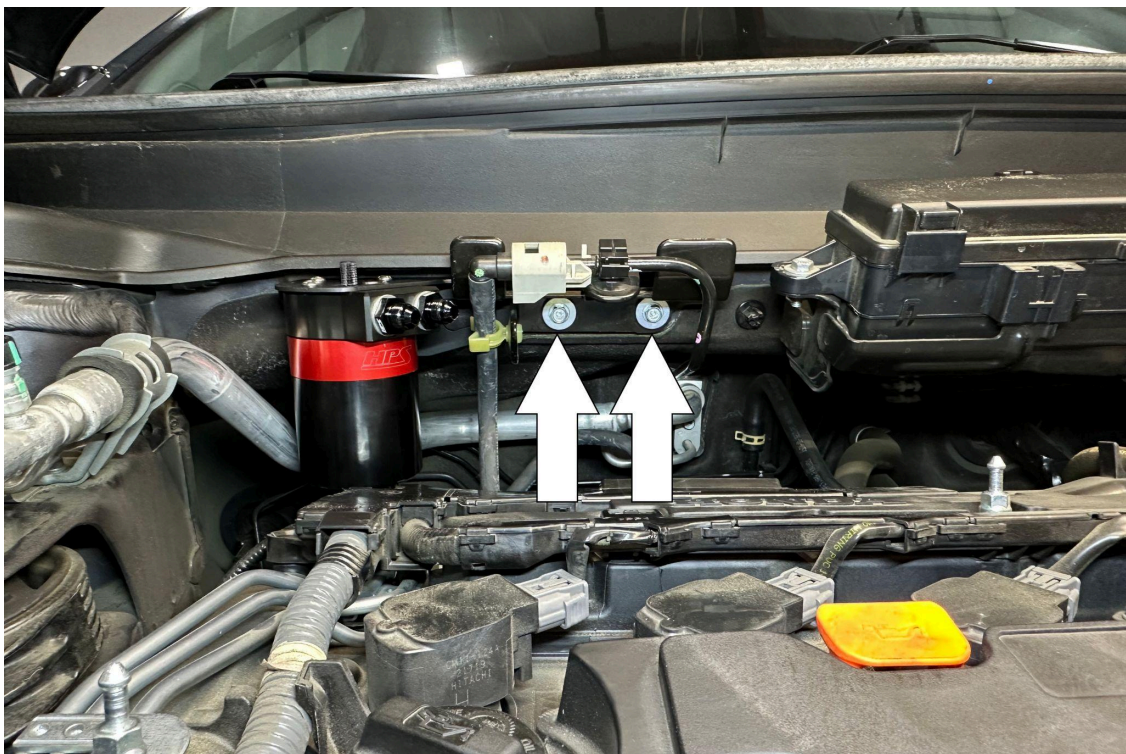


10. Mount the oil catch can behind the fuel hose bracket by reusing the factory hardware removed in step 9.

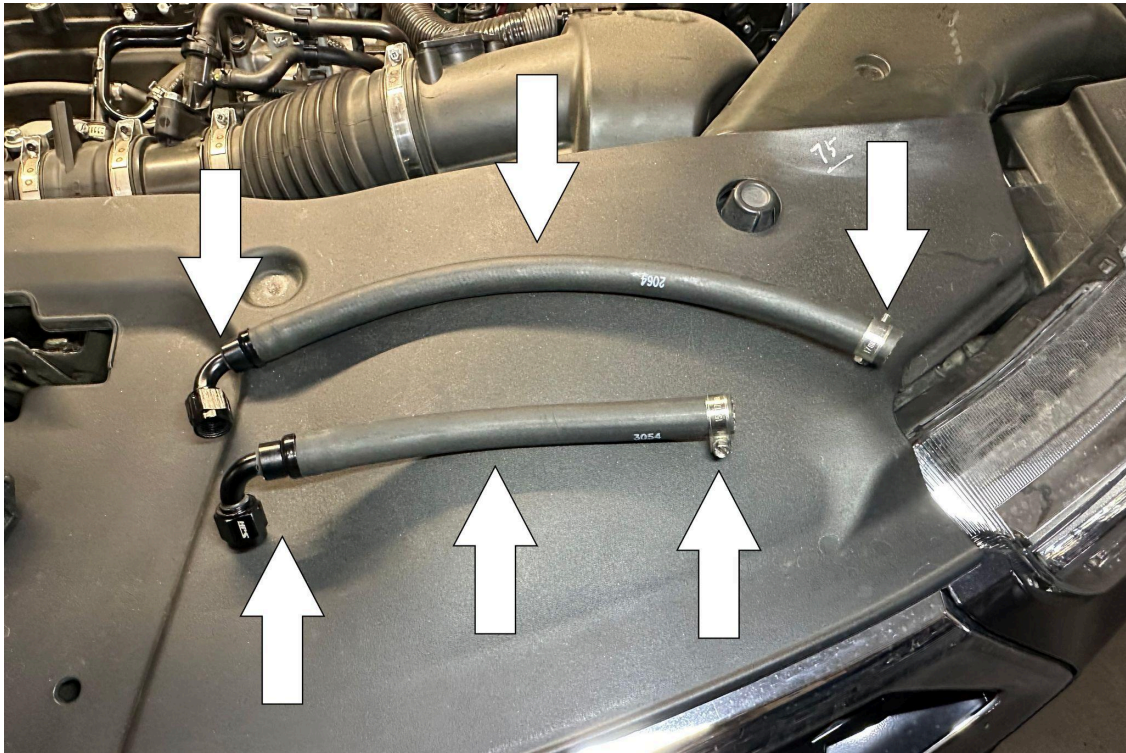


11. Press the provided 90 degree AN fittings onto each hose. Then loosely install the provided clamps to the opposite ends of the hoses.




12. Install the 7.5-inch long hose to the fitting that is closest to the engine.

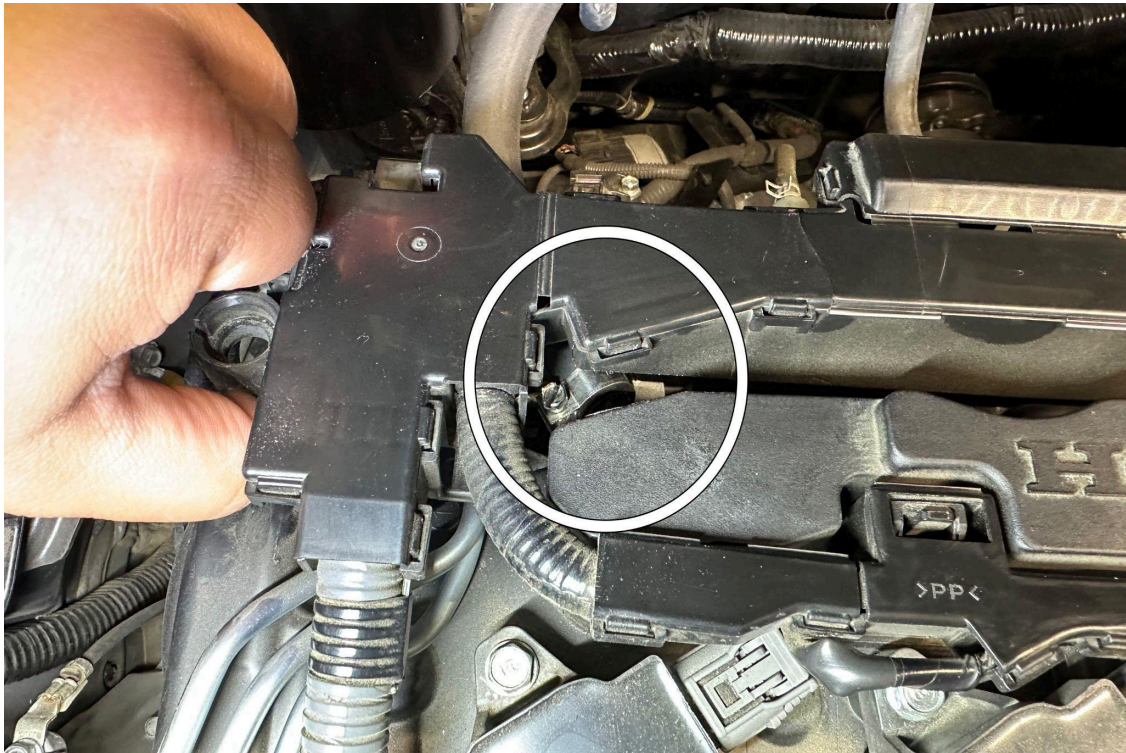

13. Gently lift the harness to install the other end of the 7.5-inch hose to the valve cover. Position the clamp and secure the hose into place.

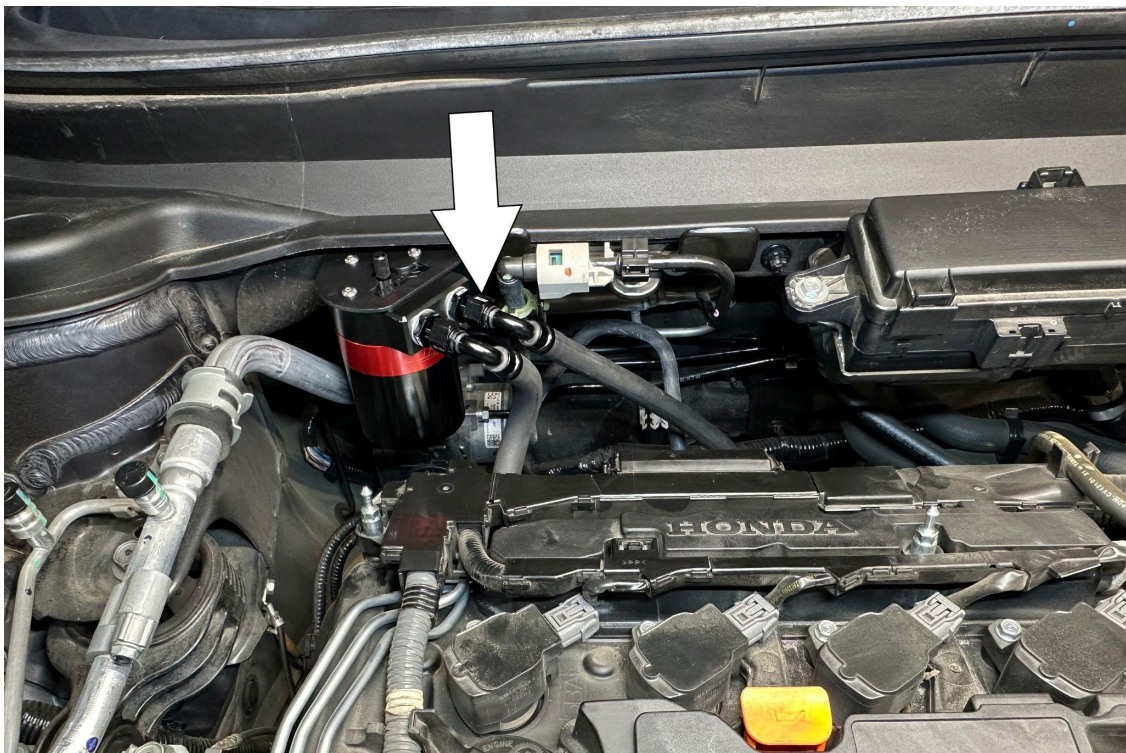

14. Install the 12.5-inch hose to the fitting closest to the firewall.

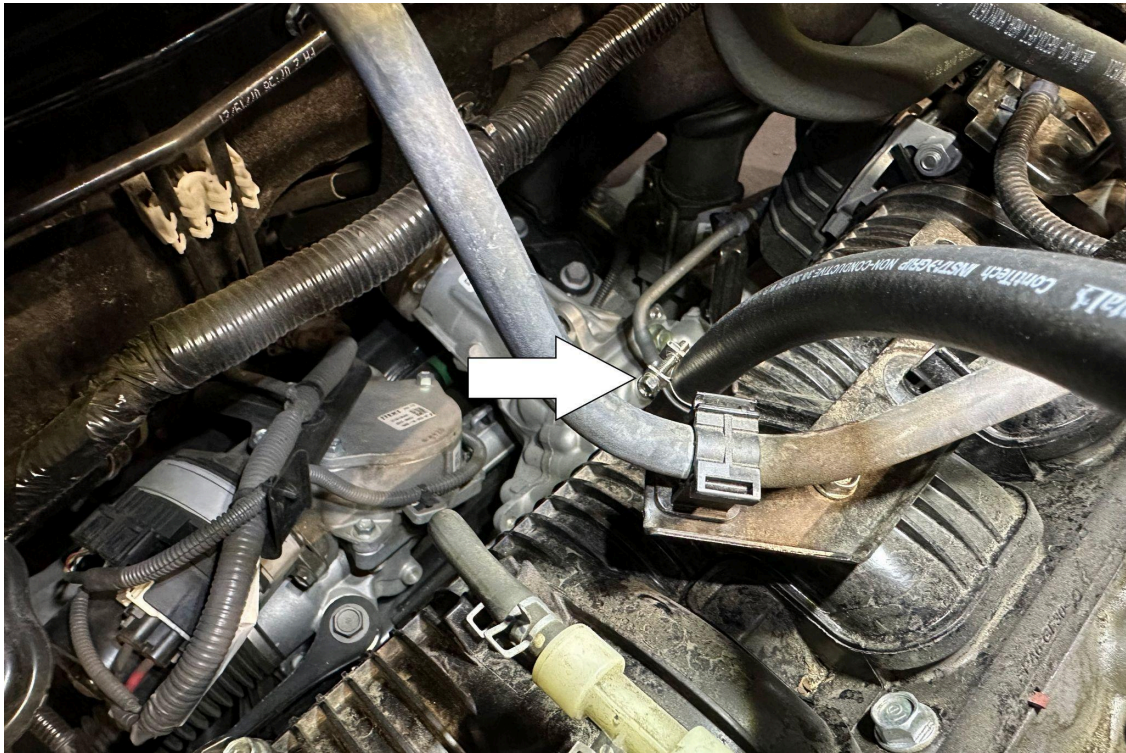

15. Connect the other end of the 12.5-inch hose to the intake manifold port. Position the clamp and secure the hose into place.



16. Reinstall the engine cover.

FINAL STEPS

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises or rattles prior to taking it for a test drive. If any problems arise, go back and check the hoses and clamps that may be causing the issue and correct the problem.

Ensure that the dipstick on the HPS oil catch can is fully seated. Failure to install the dipstick properly will result in a check engine light and poor performance.



**Also available for:
Acura 2019-2025 RDX 2.0L Turbo**



HPS Performance Air Intake Kit
Part Number [827-729](#)



HPS Performance Charge Pipe Kit
Part Number [17-124](#)



HPS Stainless Steel Magnetic Oil Drain Plug
Part Number [MDP-M12x125](#)

Contact an authorized HPS Performance dealer or
visit us at [hpsperformance.com](https://www.hpsperformance.com) for more details