



Performance Oil Catch Can Kit

Part Number: 860-029

Subaru 2018-2025 Crosstrek 2.0L

Subaru 2021-2026 Crosstrek 2.5L

Subaru 2017-2026 Impreza 2.0L

Subaru 2024-2026 Impreza 2.5L

Installation Instructions

For technical inquiries please email us at tech@hpsperformance.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle
- If it is a fitment issue, please include pictures showing the fitment problem
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page
- Optional but recommended – Your contact phone number and preferred call back time

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-4:30pm Pacific Time.

Bill of Materials

Kit Number: 860-029

Line #	Description	Part Number	Qty
1	Oil Catch Can	OCC-14	1
2	Oil Catch Can Bracket	OCC-BRKT-036	1
3	Straight Aluminum Adapter, -8 to 16mm x 1.50	AN816-8-M1615	2
4	Straight Push-On Aluminum Hose End, AN-8	150-0008	2
5	Push On Hose, AN-8	150-08	10 inches
6	Push On Hose, AN-8	150-08	16 inches
7	Aluminum Joiner, For 1/2" ID Hose	HW-BF-050	1
8	Embossed Hose Clamp, 12mm - 22mm	EMSC-12-22	2
9	Bolt, M5 x 0.8, 10mm Long	HW-B5-10	3

- **Before installing any parts of this oil catch can kit, please read the instructions thoroughly.**
- **Verify the contents of this oil catch can kit before disassembling your vehicle.**
- **DO NOT INSTALL IF ANY PARTS ARE MISSING OR DAMAGED. CONTACT tech@hpsperformance.com IMMEDIATELY. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED DUE TO IMPROPER INSTALLATION.**
- **Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.**
- **Do not attempt to install the catch can while the engine is hot.**
- **This installation may require removal of coolant lines that may be hot.**
- **For technical inquiries, please email us at tech@hpsperformance.com**

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.


GETTING STARTED

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicle's anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicle's anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

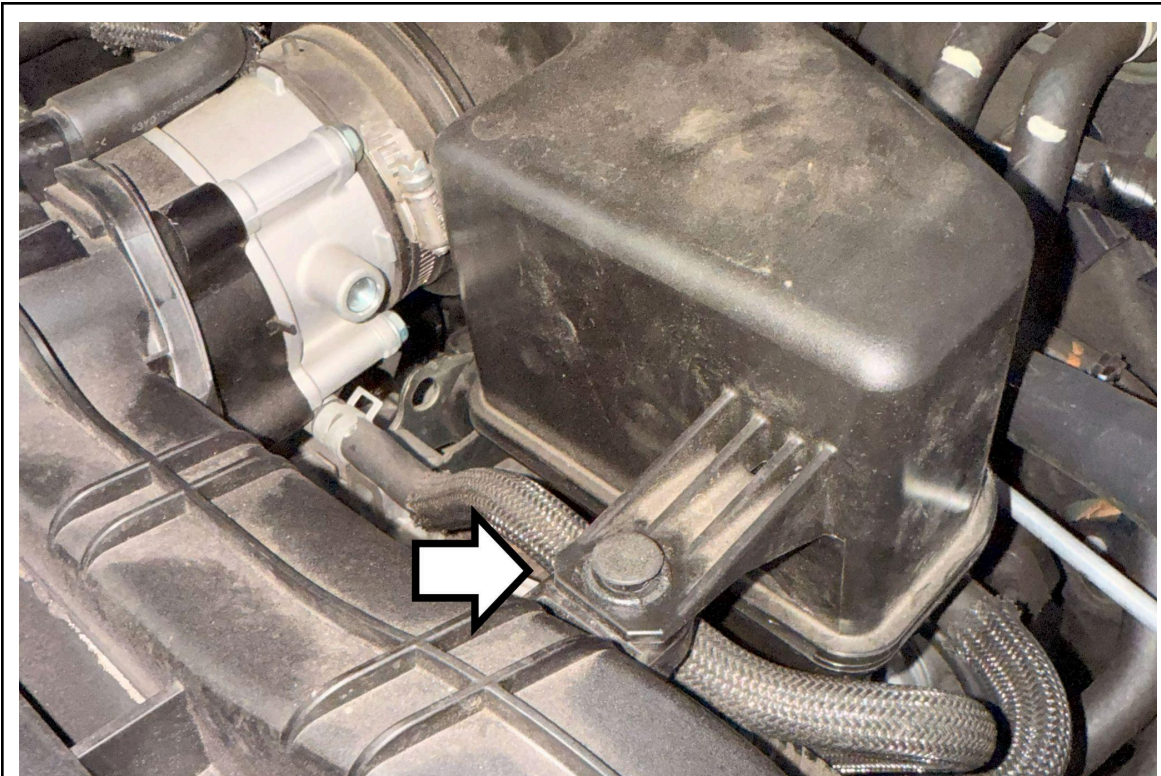


2. Use a flat head screwdriver to remove the resonator retaining clip.

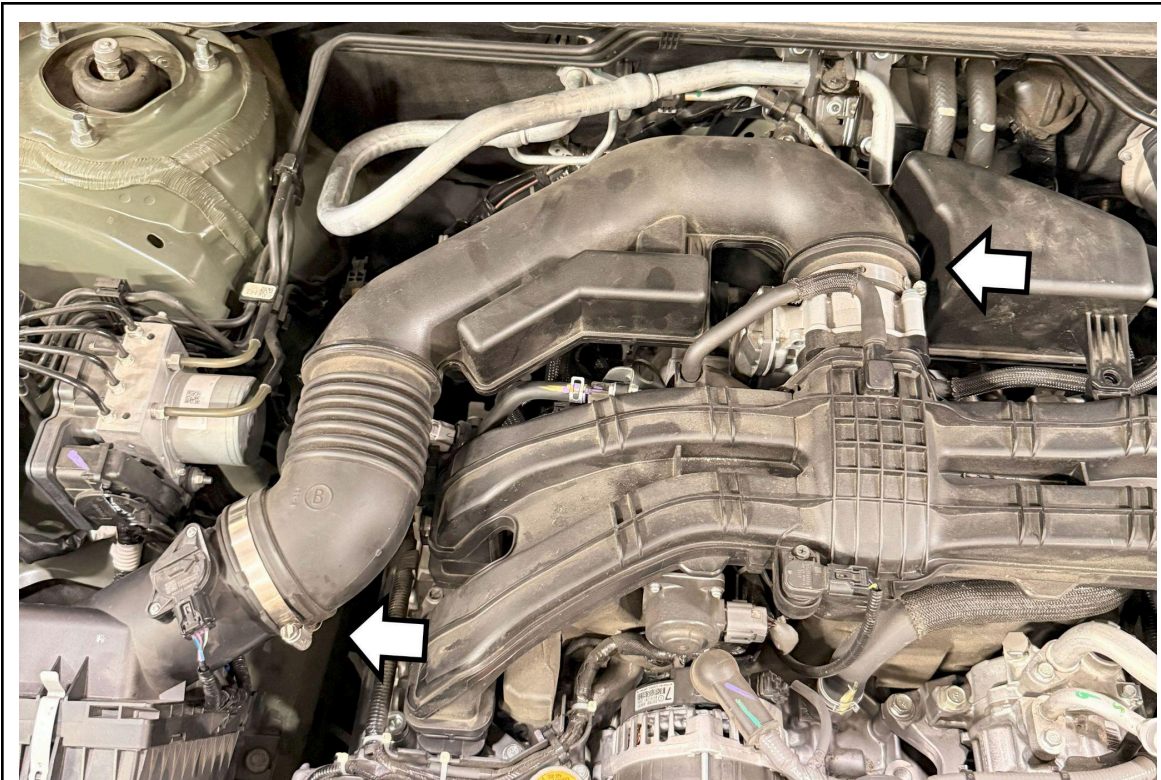

3. Loosen the hose clamps on the air intake tube using a 8mm socket.




4. Disconnect the air intake tube from the air cleaner box and throttle body.

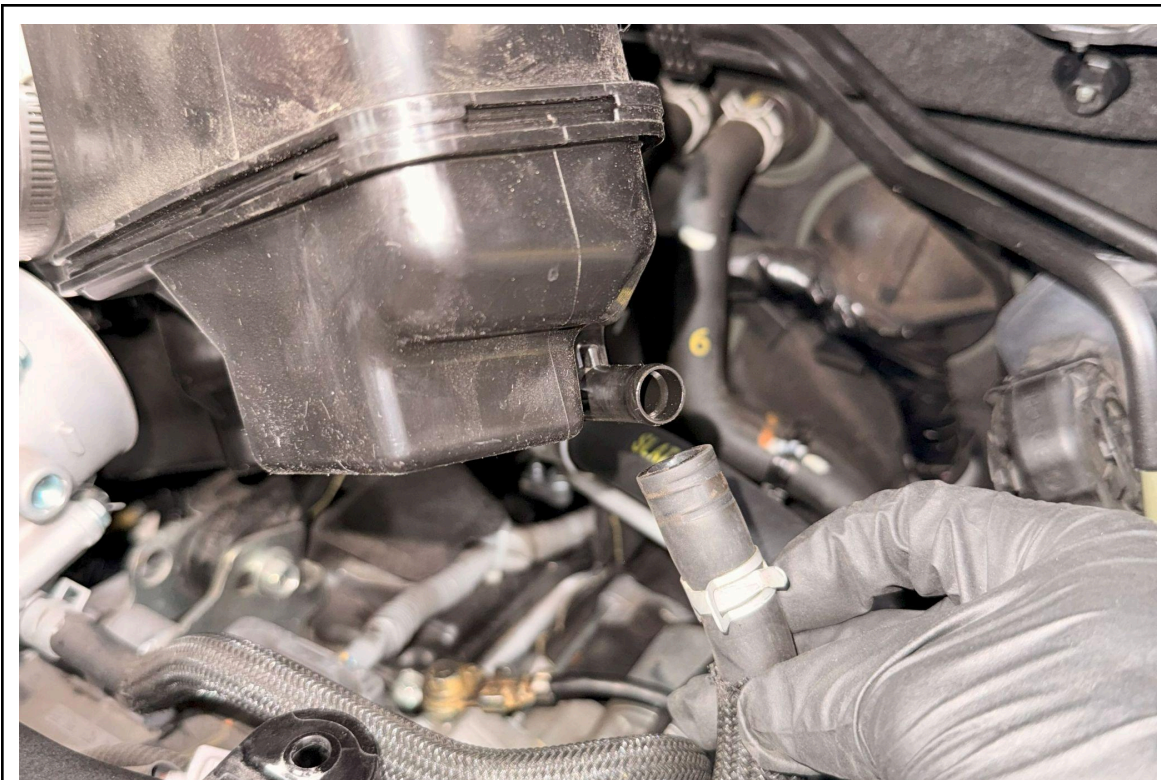


5. Disconnect the vent tube located under the intake resonator chamber. Set the intake tube aside until it is ready to be reinstalled.



6. Locate the plastic nut on the firewall and remove it.

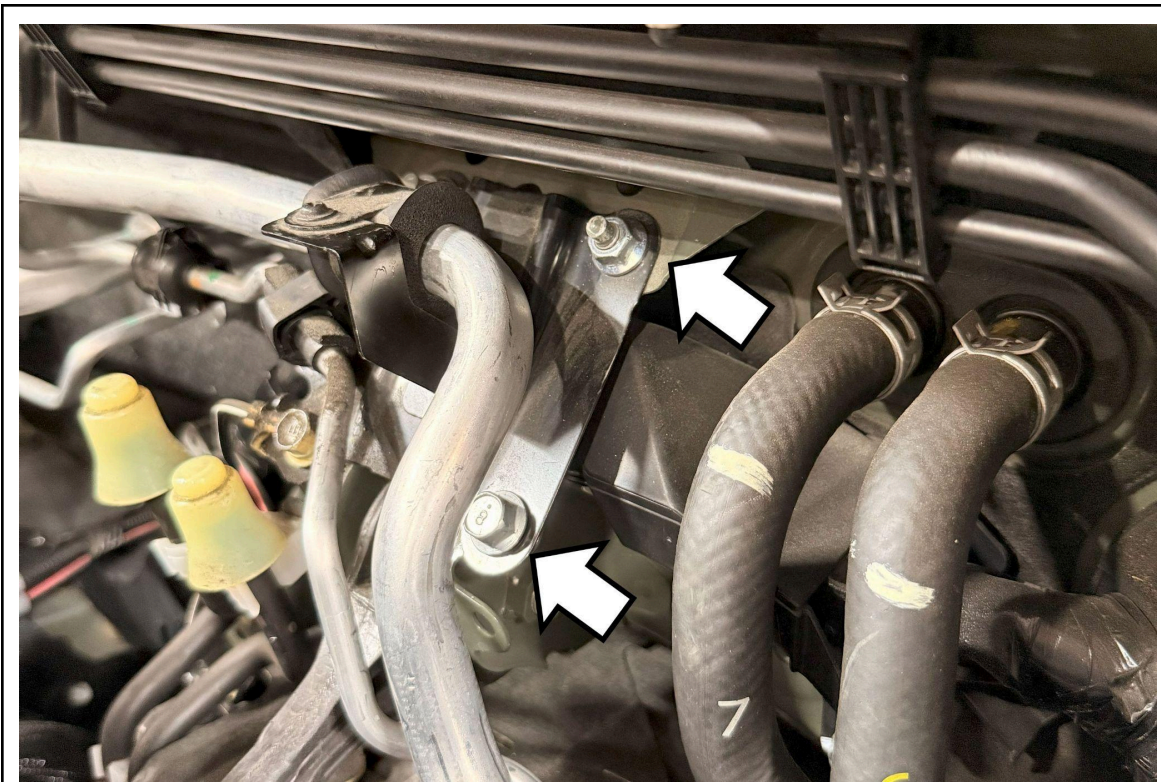


7. Use a 12mm wrench to remove the nut and bolt indicated.

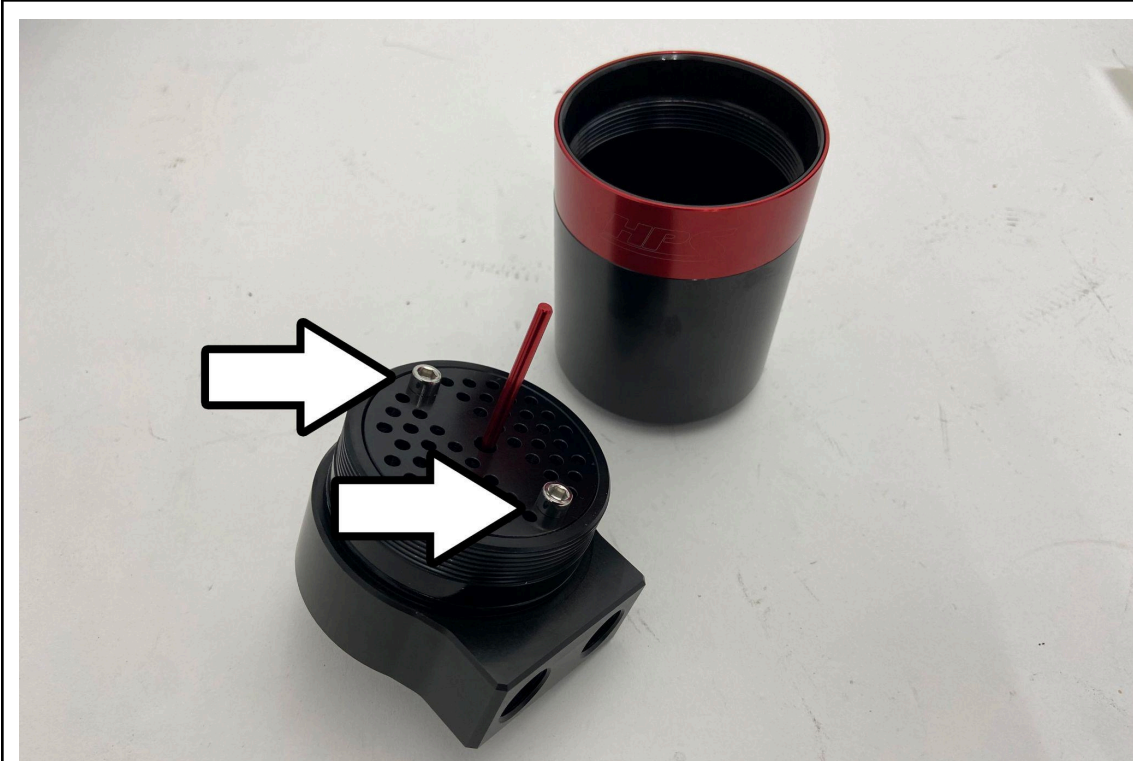

8. Unscrew the top of the HPS oil catch can and check that the Allen bolts are tight.



9. Mount the oil catch can housing onto the catch can bracket using the three provided M5 screws. Install the two provided AN adapter fittings and crush washers onto the oil catch can housing.

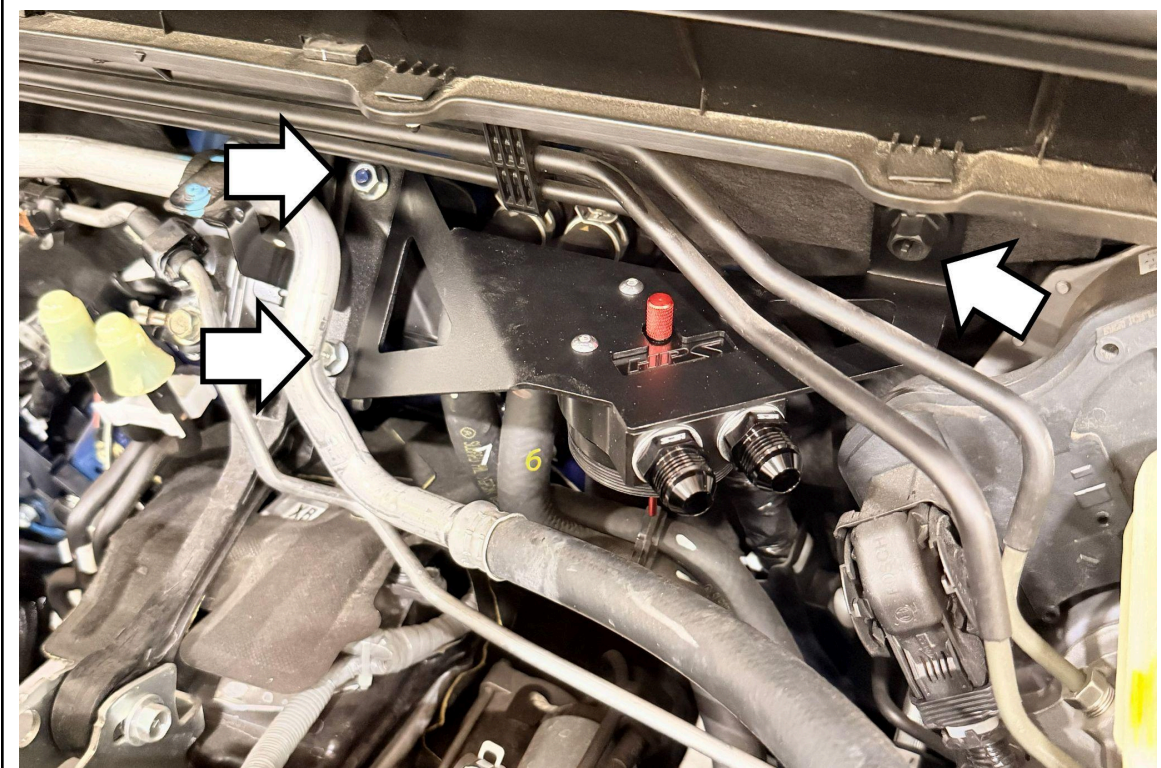


10. Mount the bracket to the vehicle reusing the factory nuts and bolt.




11. Reinstall the can back onto the catch can housing.



12. Install the AN hose end fittings onto the hoses as shown. On the shorter hose, install the provided 1/2" barbed fitting and secure it using one of the provided embossed hose clamps.

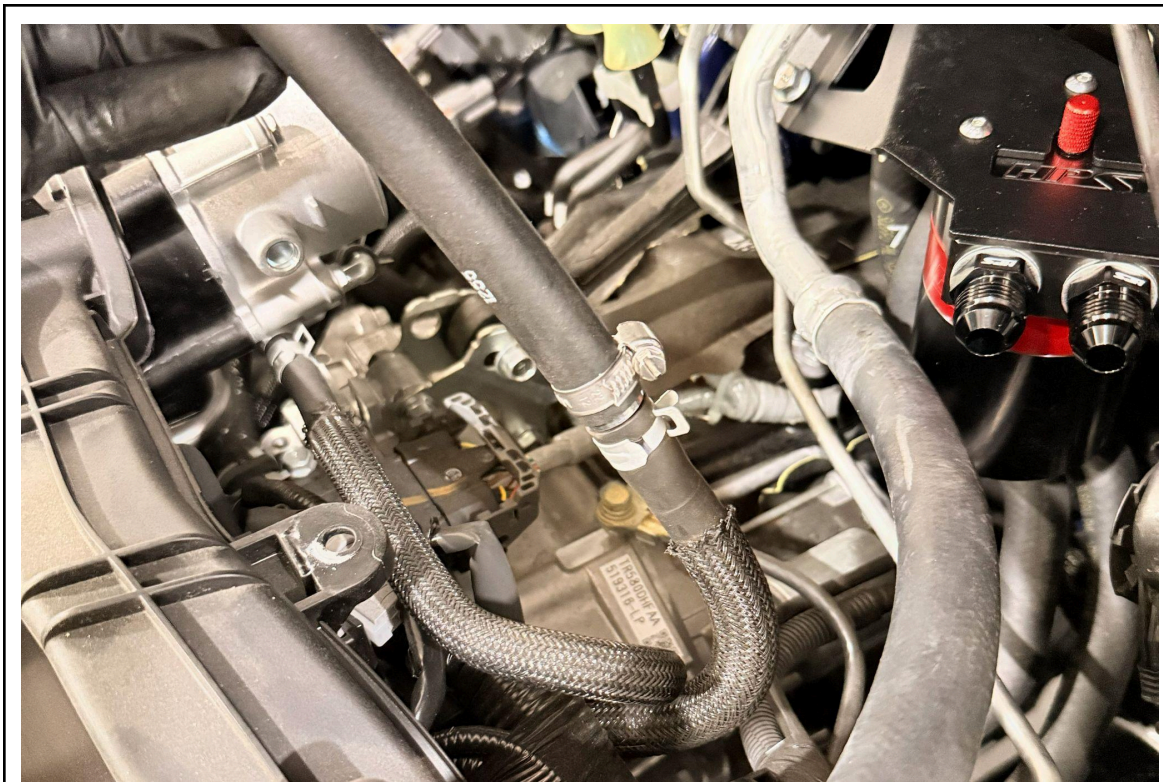

13. Connect the opposite end of the barbed fitting to the factory vent hose.

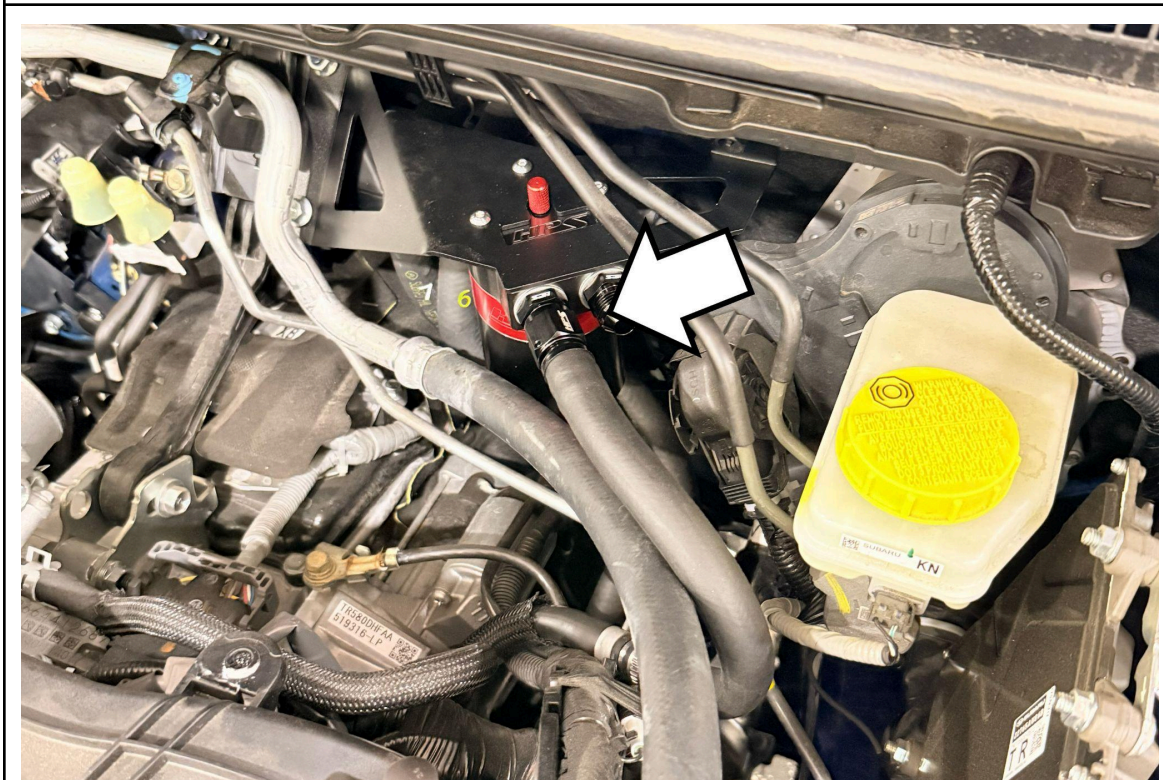

14. Route the hose below the AC line and fasten the AN hose end fitting to the fitting on the catch can.




15. Fasten the remaining AN hose end fitting onto the open port. Then, connect the opposite end of the hose onto the breather port on your factory intake tube and secure it with the remaining embossed hose clamp.

FINAL STEPS

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises or rattles prior to taking it for a test drive. If any problems arise, go back and check the hoses and clamps that may be causing the issue and correct the problem.

Ensure that the dipstick on the HPS oil catch can is fully seated. Failure to install the dipstick properly will result in a check engine light and poor performance.

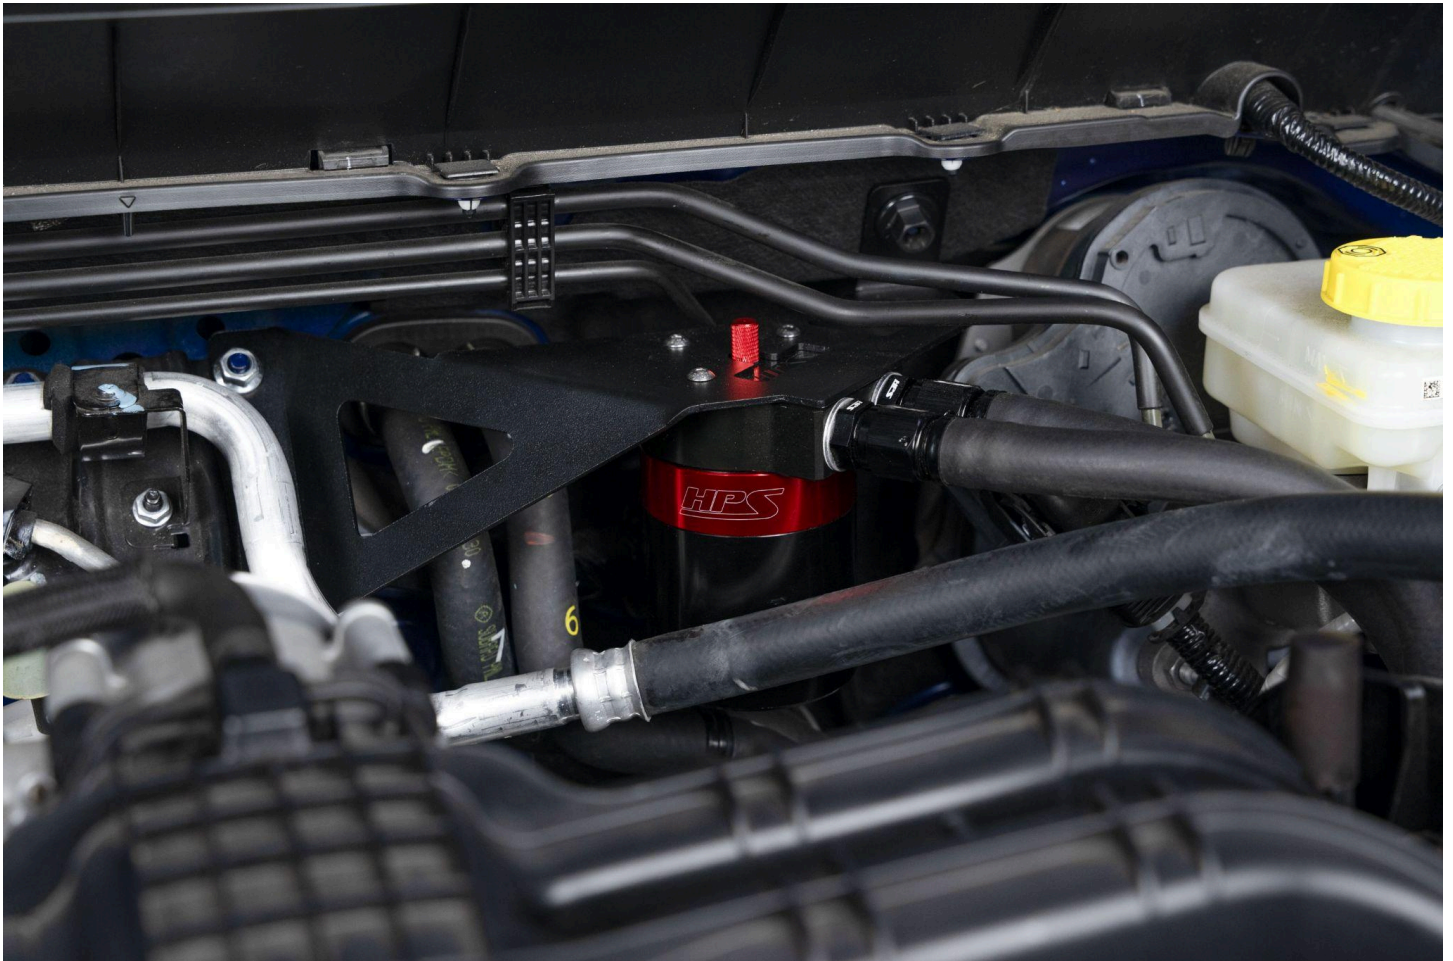

**Also available for:
Subaru 2018-2026 Crosstrek / 2017-2026 Impreza**



HPS Performance Air Intake Kit
(only fits Crosstrek 2.0L / Impreza 2.0L)
[Part Number 827-684](#)



HPS Silicone Radiator Hose Kit
(only fits Crosstrek)
[Part Number 57-2109](#)



HPS Magnetic Oil Drain Plug
[Part Number MDP-M16x150](#)



HPS Performance Billet Engine Oil Cap
[Part Number 5269-106](#)

Contact an authorized HPS Performance dealer or
visit us at hpsperformance.com for more details