



Performance Oil Catch Can Kit

Part Number: 860-033

**2007-2021 Toyota Tundra 5.7L V8
2010-2019 Toyota Tundra 4.6L V8
2008-2022 Toyota Sequoia 5.7L V8
2010-2012 Toyota Sequoia 4.6L V8**

Installation Instructions

For technical inquiries please email us at tech@hpsperformance.com

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle
- If it is a fitment issue, please include pictures showing the fitment problem
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page
- Optional but recommended – Your contact phone number and preferred call back time

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-4:30pm Pacific Time.

Bill of Materials

Kit Number: 860-033

Line #	Description	Part Number	Qty
1	Oil Catch Can	OCC-14	1
2	Oil Catch Can Bracket	OCC-BRKT-041	1
3	Straight Aluminum Adapter, AN-6 to M16 x 1.50	AN816-6-M1615	1
4	Straight Aluminum Adapter, AN-8 to M16 x 1.50	AN816-8-M1615	1
5	Push-On Aluminum Hose End, AN-6, 60 Degree	150-6006	1
6	Push-On Aluminum Hose End, AN-8, 60 Degree	150-6008	1
7	150 Series Push-On Hose, AN-6	150-06	16 inches
8	150 Series Push-On Hose, AN-8	150-08	14 inches
9	Bolt, M5 x 0.8, 10mm Long	HW-B5-10	3
10	Bolt, M8 x 1.0, 30mm Long	HW-B8-30	1
11	Flat Washer, M8, 24mm OD	HW-FW8L	1
12	Spacer, M8, 16mm OD, 13mm Length	HW-FS-M8-13	1
13	Embossed Hose Clamp, 12mm-22mm	EMSC-12-22	1

- **Before installing any parts of this oil catch can kit, please read the instructions thoroughly.**
- **Verify the contents of this oil catch can kit before disassembling your vehicle.**
- **Report any defective or missing parts to HPS directly. The HPS dealer you purchased this product from might not have the replacement parts you need.**
- **Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.**
- **Do not attempt to install the oil catch can kit while the engine is hot.**
- **This installation may require the removal of coolant lines that may be hot.**
- **For technical inquiries, please email us at tech@hpsperformance.com**

PLEASE READ CAREFULLY BEFORE INSTALLATION!


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.

GETTING STARTED

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicle's anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicle's anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

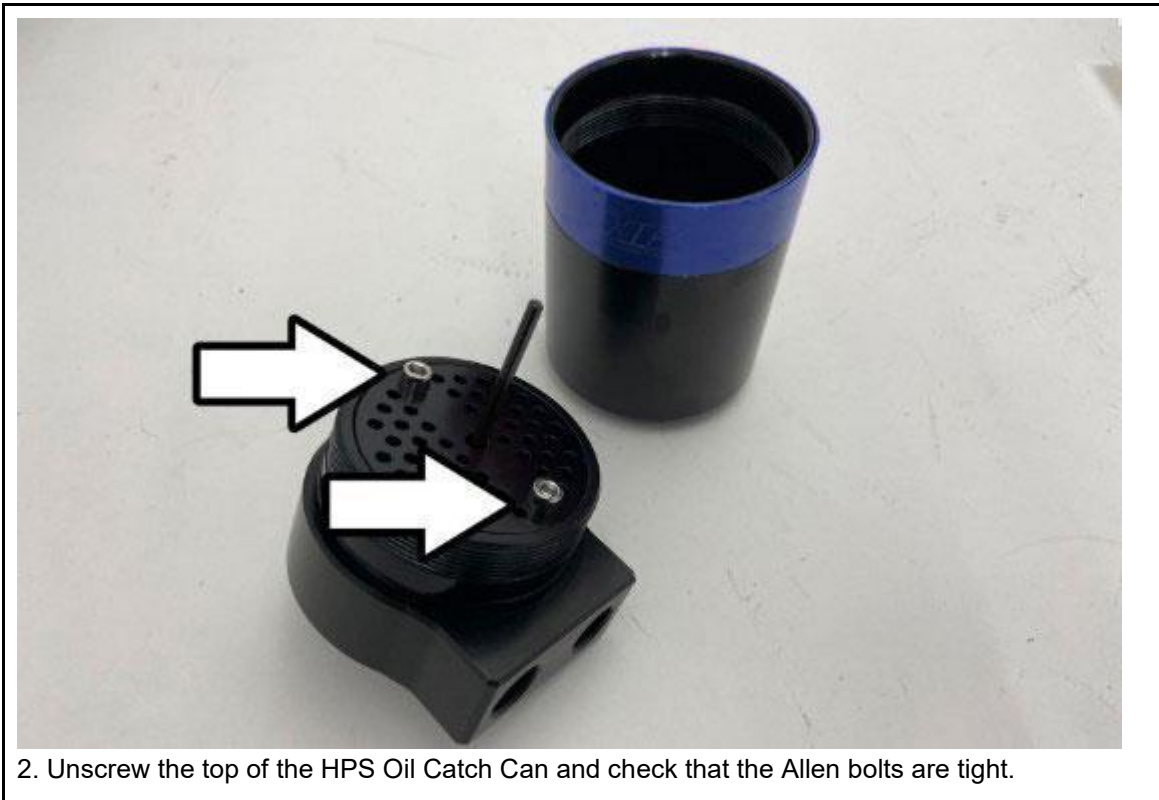





3. Remove the engine cover from the vehicle.




4. Depress the spring clamp on the upper PCV port to disconnect the PCV hose from the intake manifold.

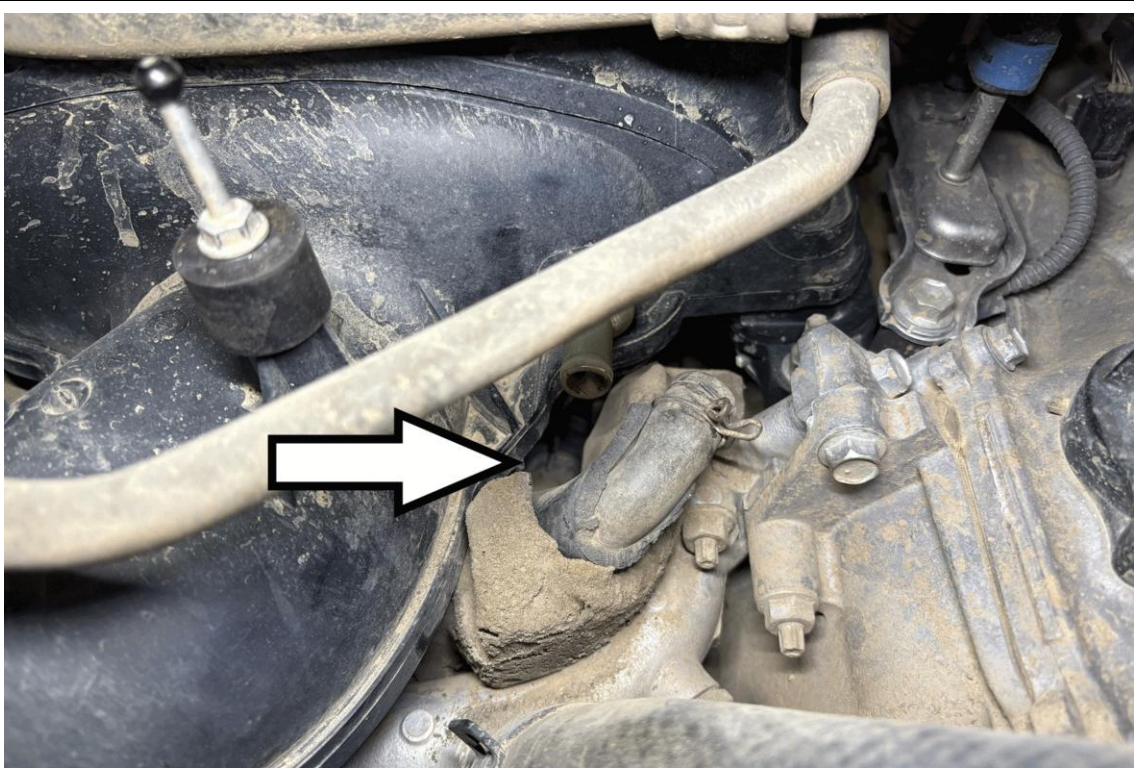


5. Depress the spring clamp on the lower PCV port to completely remove the PCV hose from the vehicle.

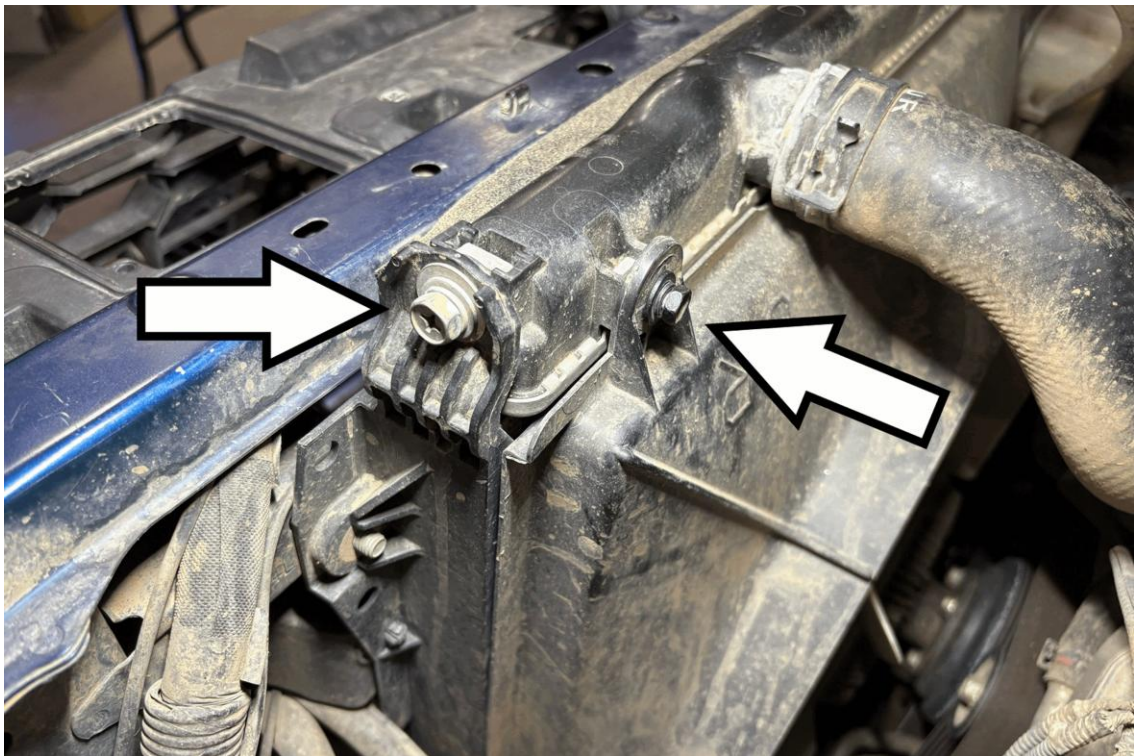


6. Remove the M6 and M8 bolts from the driver side of the radiator.

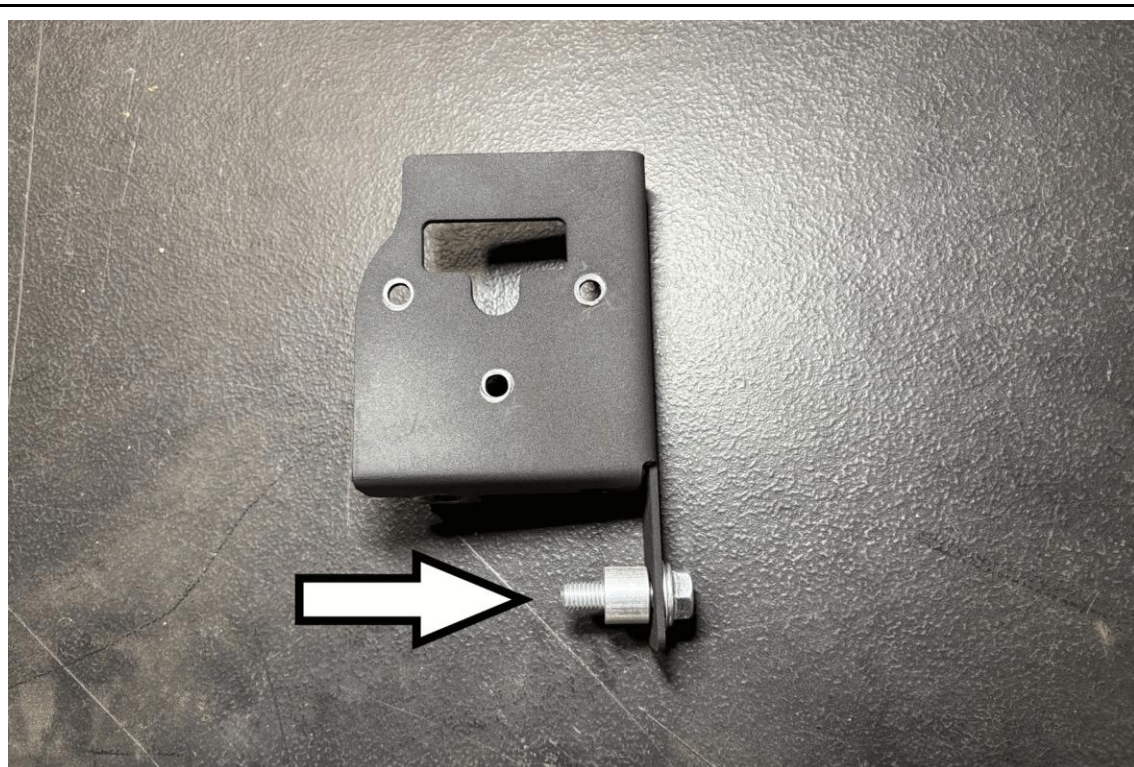


7. Assemble the provided M8 bolt, washer, and spacer onto the oil catch can bracket as shown above.

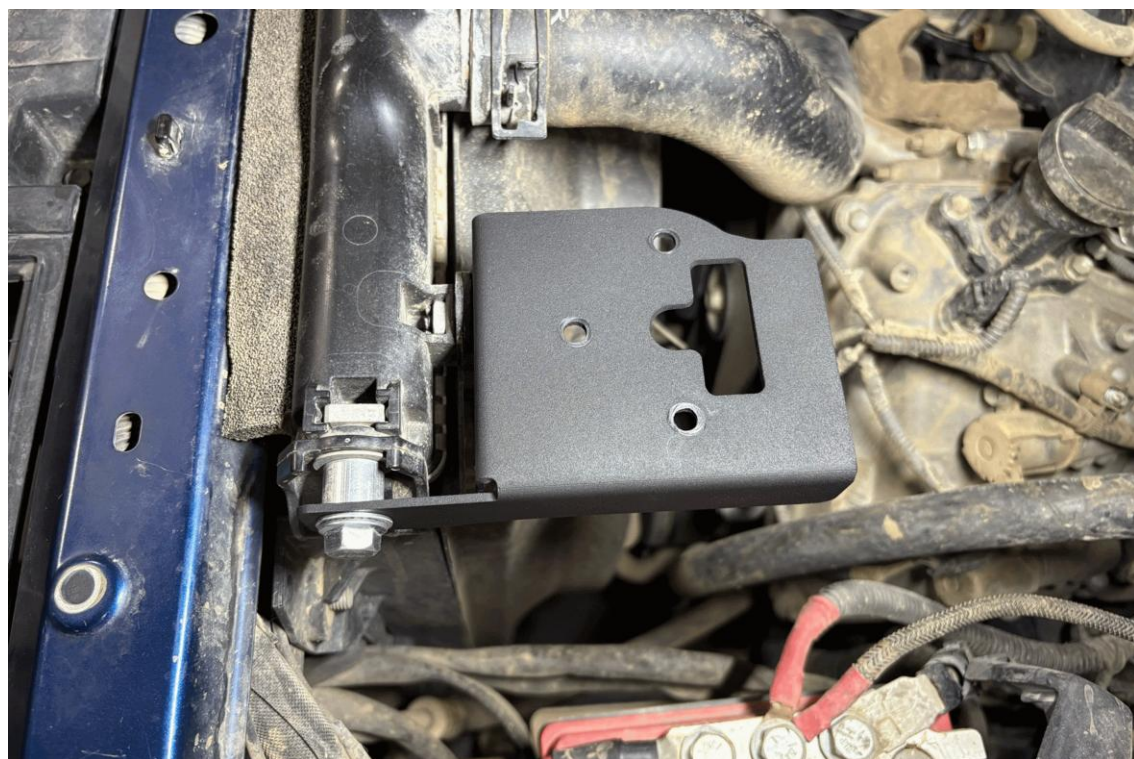

8. Secure the oil catch can bracket onto the radiator using the M8 bolt from step 7 along with the factory M6 bolt (mounting hole located on the underside of the bracket).

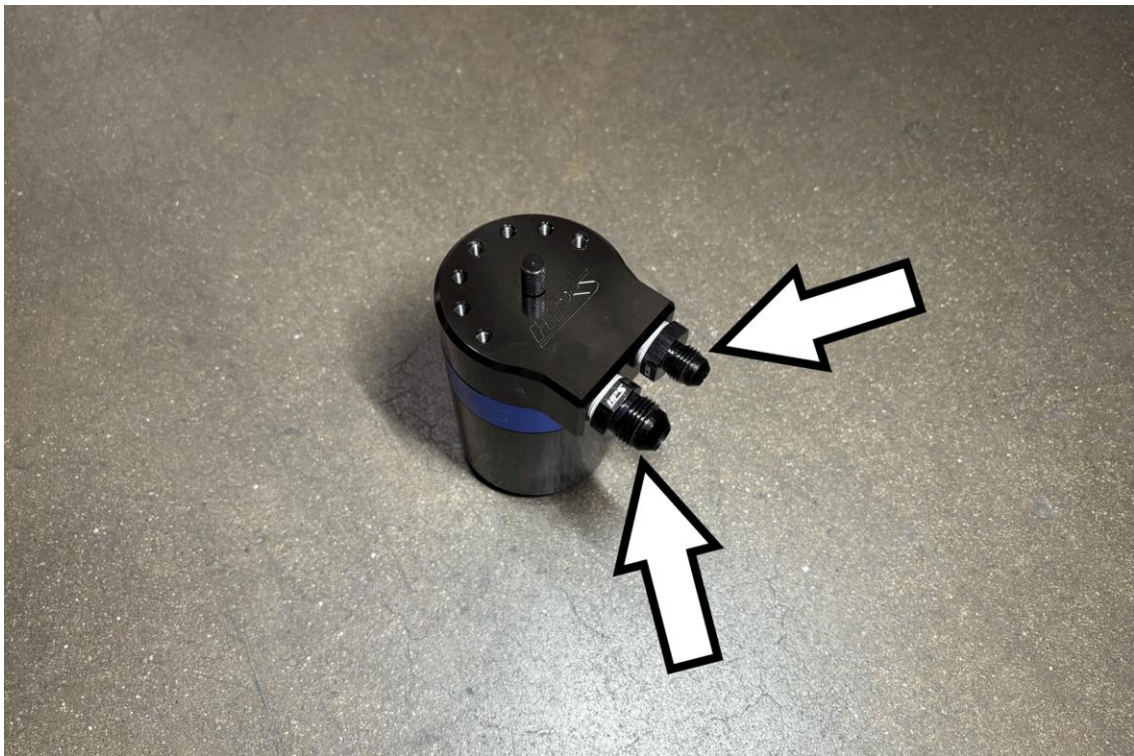


9. Attach the -6 fitting to the right side of the oil catch can and then the -8 fitting onto the left side as shown.

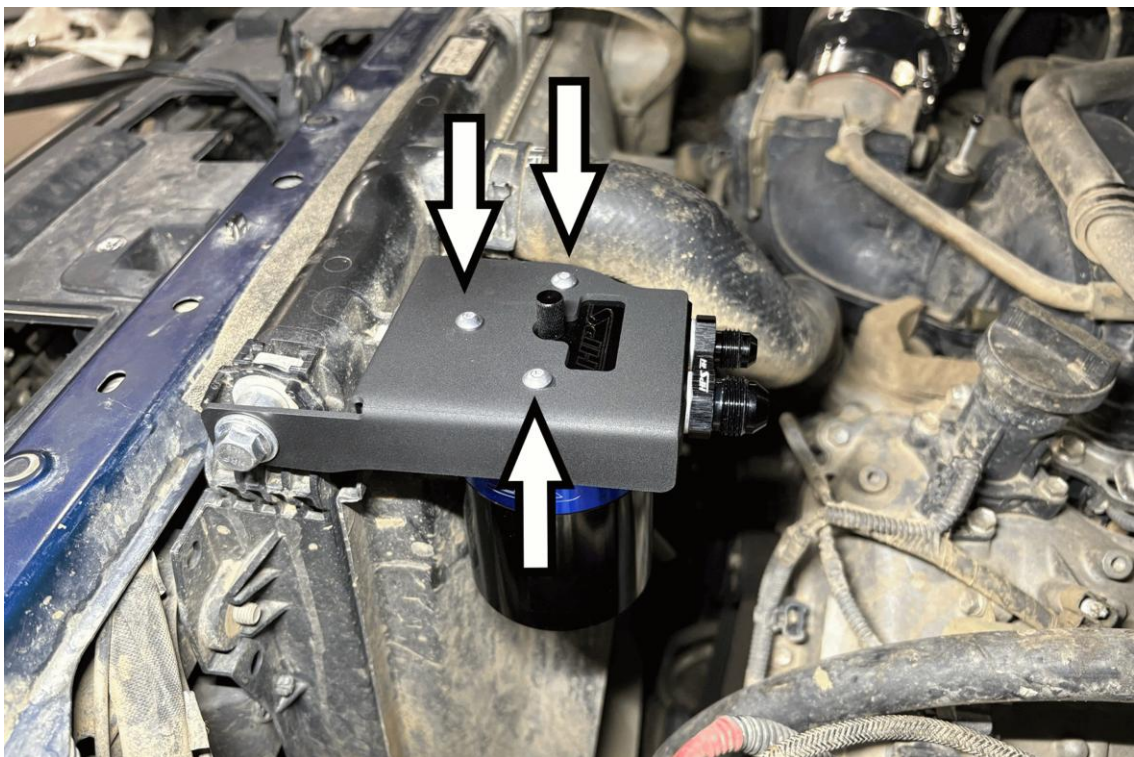

10. Secure the oil catch can to the oil catch can bracket using the three provided M5 bolts.



13. Assemble the provided -8 hose, -8 fitting, and embossed hose clamp as shown above.

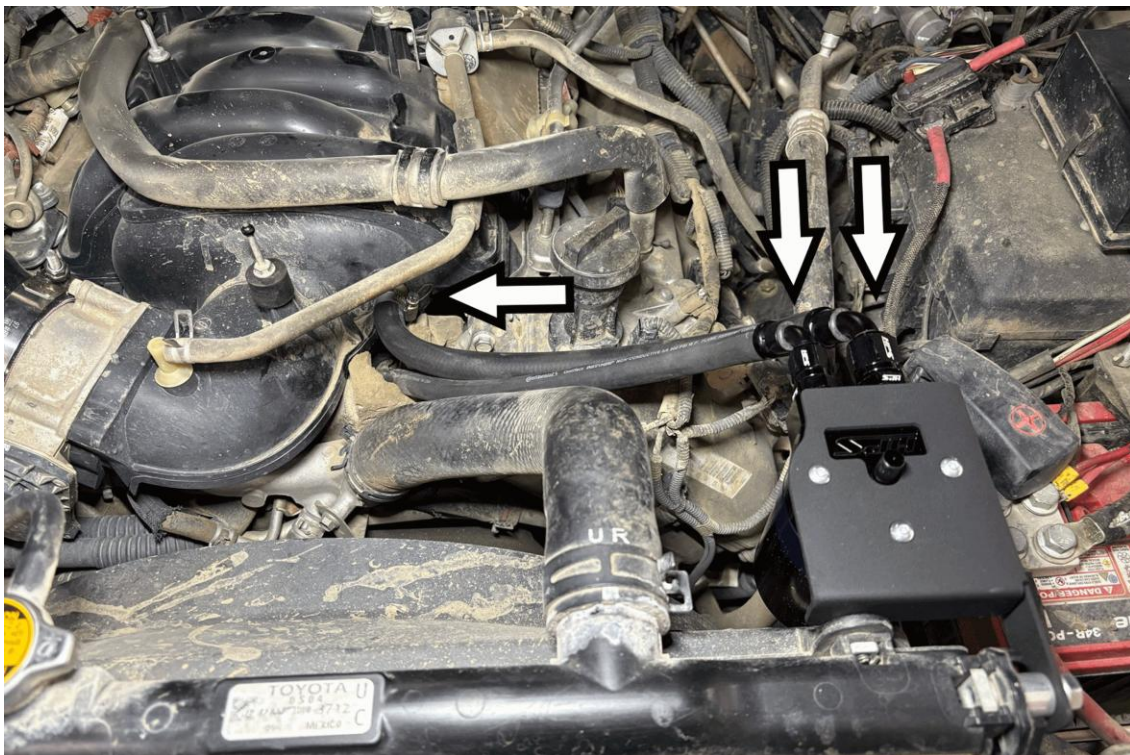

14. Secure the -8 hose to the upper PCV port on the intake manifold. Next, secure the fittings to the oil catch can before reinstalling the engine cover back into the vehicle.

FINAL STEPS

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises or rattles prior to taking it for a test drive. If any problems arise, go back and check the hoses and clamps that may be causing the issue and correct the problem.

Ensure that the dipstick on the HPS oil catch can is fully seated. Failure to install the dipstick properly will result in a check engine light and poor performance.



Also available for:
2007-2021 Toyota Tundra 5.7L & 2008-2022 Toyota Sequoia 5.7L



HPS Performance Air Intake Kit
(Only fits 2008-2011 Sequoia & 2007-2011 Tundra)
Part Number [827-629](#)



HPS Performance Air Intake Kit
(Only fits 2012-2019 Tundra)
Part Number [827-630](#)



HPS Silicone Radiator Coolant Hose Kit
(Fits both 4.6L and 5.7L models)
Part Number [57-1303](#)



HPS Silicone Heater Coolant Hose Kit
(Only fits 2007-2011 Tundra)
Part Number [57-1702](#)



HPS Silicone Heater Coolant Hose Kit

(Only fits 2012-2017 Tundra)

Part Number [57-1342](#)



HPS Magnetic Oil Drain Plug

(Fits both 4.6L and 5.7L models)

Part Number [MDP-M12x125](#)

Contact an authorized HPS Performance dealer or
visit us at hpsperformance.com for more details